

# Operating Instructions for Pressure Sensors Heavy Duty Compact

Model: SEN-86../ SEN-87...



# 1. Contents

1.	Contents	2
2.	Note	3
	Instrument Inspection	
4.	Regulation Use	4
	Operating Principle	
	Mechanical Connection and Putting to Operation	
7.	Electrical Connection	6
	Maintenance	
9.	Trouble shouting	9
10.	Technical Information	10
	Order Codes	
	Dimensions	
13.	Disposal	14
	EU Declaration of Conformance	

## Manufactured and sold by:

Kobold Messring GmbH Nordring 22-24 D-65719 Hofheim

Tel.: +49(0)6192-2990 Fax: +49(0)6192-23398 E-Mail: info.de@kobold.com Internet: www.kobold.com

### 2. Note

Please read these operating instructions before unpacking and putting the unit into operation. Follow the instructions precisely as described herein.

The instruction manuals on our website <a href="www.kobold.com">www.kobold.com</a> are always for currently manufactured version of our products. Due to technical changes, the instruction manuals available online may not always correspond to the product version you have purchased. If you need an instruction manual that corresponds to the purchased product version, you can request it from us free of charge by email (<a href="mailto:info.de@kobold.com">info.de@kobold.com</a>) in PDF format, specifying the relevant invoice number and serial number. If you wish, the operating instructions can also be sent to you by post in paper form against an applicable postage fee.

The devices are only to be used, maintained and serviced by persons familiar with these operating instructions and in accordance with local regulations applying to Health & Safety and prevention of accidents.

When used in machines, the measuring unit should be used only when the machines fulfil the EC-machine guidelines.

# 3. Instrument Inspection

Instruments are inspected before shipping and sent out in perfect condition. Should damage to a device be visible, we recommend a thorough inspection of the delivery packaging. In case of damage, please inform your parcel service / forwarding agent immediately, since they are responsible for damages during transit.

### Scope of delivery:

The standard delivery includes:

Pressure Sensors Heavy Duty Compact model: SEN-86../87...

# 4. Regulation Use

Pressure sensors transmit the mechanical pressure signal into an electrical output signal. The media's which are in contact with the instrument should have no effects on the instrument materials used. Do not use standard units in hazardous areas and for oxygen applications.

# 5. Operating Principle

KOBOLD Pressure sensors model SEN-86 are inexpensive pressure sensors with thick film ceramic pressure element. With their accuracy, reliability and compact design, they are perfectly suitable for OEM applications in medium to high quantities.

The materials and technology used make these pressure sensors insensitive to chemically aggressive media and mechanical load.


Particularly hydraulics systems with their high and fast pressure peaks are thus preferred applications.

# 6. Mechanical Connection and Putting to Operation

The place where pressure is taken should be prepared according the following specifications for the screw-in threads.

For sealing, please use sealing discs acc. DIN 16258 or profile washers. The maximum initial tension depends on the material, the shape of the used sealing and the mechanical connection of the pressure sensor.

There should be no vibrations and/or no radiation of heat near the mounting position of the sensors. Please pay attention that the given technical data's are not exceeded. After the mechanical and electrical connection, the sensor works immediately.

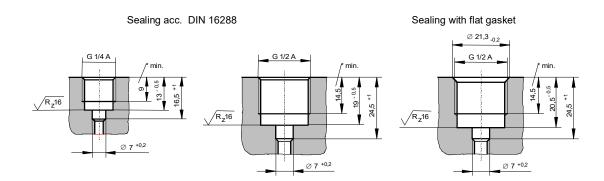

### 7. Electrical Connection

- Ensure that the power is disconnected during connection of the cable.
- The electrical connection is made either via plug and pin or by cable.
- The exact wiring scheme is shown on the sketches hereafter or at the type plate of your sensor.

### Meaning of the different connector markings

UB+ positive pole of the supply voltage
OV negative pole of the supply voltage
S+ positive pole of the output signal
S- negative pole of the output signal
Shielding Cable protection enclosure-earth

The sensor can be supplied with a non stabilised DC source with the given voltage range. The minimum supply voltage for pressure sensors with current output should be the minimum UB plus the minimum voltage, which is needed for the external indicator:


### **Current output**

	2-wire system	3-wire system	
Output signal	420 mA	020 mA	
Supply voltage	U <sub>B</sub> = 15 32 V <sub>DC</sub>		
Permissible load	Ra[Ohm] = (UB[V] - 15 V) / 0,02 A		
Wiring	see schematic		

### Voltage output

	3-wire system	3-wire system	
Output signal	05 V	010 V	
Supply voltage	U <sub>B</sub> = 15 32 V <sub>DC</sub>		
Permissible load	R <sub>A</sub> >5 kΩ	Ra >10 kΩ	
Wiring see schematic			

# Electrical connection, principle drawings pin assignment, cable marking

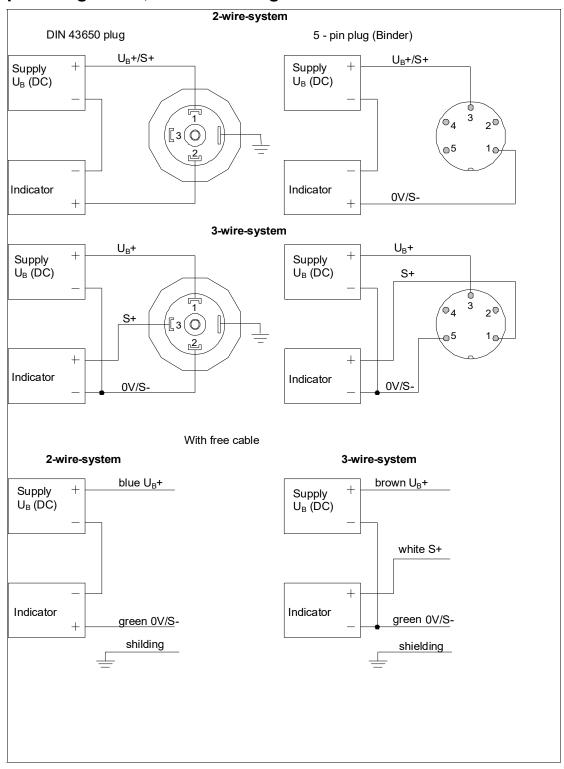



Attention! Incorrect wiring will lead to damage of the unit's electronics.

# 8. Maintenance

The pressure sensors described in this manual are maintenance free! They do not contain any components which may be repaired or exchanged locally. Repairs are not possible other than in our factory.

# 9. Trouble shouting

Trouble	Possible reason	What's to do
No signal	no supply voltage broken wire	Check your power supply and wiring. If necessary replace
		defective parts
	Sensor has been wired faulty	Check the wiring according to the sketches, adjust wiring if
		necessary.
	No pressure	Check your tubing , valves open?
	Defective electronics	Return sensor to us for repair
	caused by to high supply	
	voltage or by external voltage	
Unchanged signal by	Pressure port is clocked	Clean the pressure port
changing pressure	Defective electronic caused	Return sensor to us for repair
	by to high supply voltage or	
	by external voltage	
	Pressure sensor over pres-	Return sensor to us for repair
To blink account the accion	surized	D-t
To high, even on changing	Defective electronics caused	Return sensor to us for repair
pressure unchanged signal	by to high supply voltage or	
Chan of signal to small	by external voltage	Adirect cumply valtage Adhers
Span of signal to small	Supply voltage to low	Adjust supply voltage Adhere
7 singel to binb	Resistance to high	to max. allowable resistance
Zero signal to high	Mechanical overburden	Return to us for repair
Output signal non linear	Mechanical overburden	Recalibrate sensor resp. return to us for repair
	<u> </u>	tuiti to us foi fepali

# 10. Technical Information

Model	SEN-86x0	SEN -87x0			
Technology	internal d	internal diaphragm			
Pressure type	gauge pressure				
Housing	stainless steel 1.4305				
Connection:	G ½ male; stainless steel 1.4301 (NPT, UNF on request)	G ¼ male; stainless steel 1.4301 (NPT, UNF on request)			
Sensor element	ceramic	ceramic (Al <sub>2</sub> O <sub>3</sub> )			
Measuring principle	thick film te	thick film techn. (DMS)			
O-Ring	NI	BR			
Max. Temperature	Storage: -30+100 °C Medium: -20+125 °C Ambient: -30+100 °C	Storage: -30+100 °C Medium: -20+ 85 °C Ambient: -30+100 °C			
Pressure limitation		< 60 bar: 2 x range ≥ 60 bar: 1.5 x range			
Accuracy class	0.5 f	s.d.)			
Repeatability	≤ ± 0.15	% (f.s.d.)			
Characteristic deviation	$\leq \pm 0.3^{\circ}$	% (f.s.d.)			
Stability (annual)	≤ ± 0.2 % of full scale in rated conditions				
Electrical connection	Plug DIN 43 650 A / Plug M12x1 Cable connection				
Power supply	1532 V <sub>DC</sub>				
Output signal	4 – 20 mA, (2-v	4 – 20 mA, (2-wire), 0 – 10 V <sub>DC</sub>			
Load $(\Omega)$	≤ (U <sub>B</sub> − 15 V)/0.02	2 A (for 4 – 20 mA)			
Response time	≤ 1 ms (within 10 -	– 90% of full scale)			
Temp. comp. range	-25+85 °C				
Temperature drift	Zero:				
	≤ ± 0.02% full scale/K				
	Measuring span:				
	≤ ± 0.01% full scale/K				
Protection	IP 65 (SEN-860, SEN-870) IP67 (SEN-863, SEN-864, SEN-873, SEN-874) IP 68 (SEN-865, SEN-875)				
Options	Absolute pressure for ranges 1.025 bar Oil- and free of grease for oxygen Silicone- and LABS free Connection with 50 mm cooling fins t <sub>max</sub> 125 °C Connection and housing SS 1.4539¹¹ instead of 1.4305 Connection and housing SS 1.4571 instead of 1.4305 O-ring FPM instead of NBR O ring PTFE (Kalrez) instead of NBR <100 bar  1/4" NPT thread instead of "G" G¹/4 DIN385-E inclusive seal				
	Special connection <sup>2)</sup> on request				

<sup>1)</sup> Seawater resistant 2) Please specify in writing 3) Adapter of PSD usable

# 11. Order Codes

Sensor (Example: SEN-8600 C315)

Electrical connection	Class	Model	Output	Measuring range	Options	
DIN-plug; IP 65	0.5	SEN-8600		C305 = -0.60 bar C315= -10 bar C505 = -10.6 bar C515 = -11.5 bar C525 = -13 bar C525 = -13 bar	psi g psi g psi g y = oil- and free of	
M12-plug; IP 67	0.5	SEN-8630	C525 = -13 bar C535 = -15 bar C545 = -19 bar C555 = -115 bar B015 = 00.6 bar B025 = 01 bar B035 = 01.6 bar B045 = 02.5 bar B055 = 04 bar B065 = 06 bar B075 = 010 bar B085 = 016 bar A095 = 025 bar A105 = 040 bar A115 = 060 bar A125 = 0160 bar A135 = 0160 bar A140 = 0200 bar A145 = 0250 bar A155 = 0400 bar A165 = 0600 bar A170 = 0700 bar A175 = 0800 bar	C535 = -15 bar C545 = -19 bar C555 = -115 bar B015 = 00.6 bar B025 = 01 bar B035 = 01.6 bar B045 = 03 bar B045 = 03 bar B055 = 0300 P060 = 060 P075 = 0150 P085 = 0300 P090 = 0300 P090 = 0300	oxygen y = silicone- and LABS-free Y = connection with 50 mm cooling fins t <sub>max</sub> 125 °C	
Cable connection; IP67 Standard cable 1 m (other length on request)		SEN-8640		4 – 20 mA B055 B065 B075 /2 = 0 –10 V B085 A095	B065= 06 bar B075= 010 bar B085= 016 bar A095= 025 bar B085= 025 bar B085= 0200	1.4539 (seewater resistant) instead of 1.4305 Y = connection and
Cable connection; IP 68 Standard cable 1 m (other length on request)	0.5	SEN-8650		A115= 040 bar A125= 0100 bar A135= 0160 bar A140 = 0200 bar A145= 0250 bar A155= 0400 bar A165 = 0600 bar A170 = 0700 bar	0 psi g 00 psi g 00 psi g 00 psi g 000 psi g 000 psi g 000 psi g	

# SEN-86../87..

### Sensor (Example: SEN-8700 C315)


Electrical connection	Class	Model	Output	Measuring range		Options							
DIN-plug; IP 65	0.5	SEN-8700	C315=-1 C505 = -1 C515 = -1 C515 = -1 C525 = -1 C535 = -1 C545 = -1 C555 = -1 B015 = 0. B025= 0. B035= 0. B045= 0. B045= 0. B065= 0. B065= 0. B075= 0. B085= 0. A105= 0. A105= 0. A105= 0. A125= 0. A125= 0. A140 = 0. A145= 0. A155= 0. A165 = 0. A170 = 0.	C305 = -0.60 bar	<b>H 315</b> = -300 Hg <b>P 020</b> = 010 psi g	Thread without = G 1/4 male Y = absolute pressure for ranges 1.025 bar Y = oil- and free of							
M12-plug; IP 67	0.5	SEN-8730		C515 = -11.5 b C525 = -13 ba C535 = -15 ba C545 = -19 ba C555 = -115 ba B015 = 00.6 ba B025 = 01 bar B035 = 01.6 ba B045 = 02.5 ba B055 = 04 bar B065 = 06 bar B075 = 010 ba B085 = 016 ba A095 = 025 ba A105 = 040 ba A115 = 060 ba A125 = 0100 ba A140 = 0200 ba A145 = 025 ba A155 = 0400 ba A155 = 0400 ba A155 = 0400 ba A165 = 0600 ba A170 = 0700 ba	C515 = -11.5 bar C525 = -13 bar C535 = -15 bar C545 = -19 bar C555 = -115 bar B015 = 00.6 bar B025 = 01 bar B035 = 01.6 bar	P 025= 015 psi g P 045= 030 psi g P 055= 050 psi g P 060 = 060 psi g P 065= 0100 psi g P 075= 0150 psi g P 085= 0200 psi g P 090 = 0300 psi g	grease for oxygen  Y = silicone- and LABS-free  Y = connection with 50 mm cooling fins t <sub>max</sub> 125 °C  Y = connection and						
Cable connection; IP67 Standard cable 1 m (other length on request)	0.5	SEN-8740			4 – 20 mA	4 – 20 mA	4 – 20 mA	4 – 20 mA /2 = 0 –10 V	4 – 20 mA	4 - 20 mA B05 B06 B07 /2 = 0 -10 V B08	B045 - 02.5 bal B055 = 04 bar B065 = 06 bar B075 = 010 bar B085 = 016 bar B085 = 016 bar	P 100 = 0500 psi g P 105= 0600 psi g P 115= 01000 psi g P 125= 01450 psi g	housing SS 1.4539 <sup>1)</sup> (seewater resistant) instead of 1.4305 <b>Y</b> = connection and
Cable connection; IP 68	0.5	SEN-8750			A095= 025 bar A105= 040 bar A115= 060 bar A125= 0100 bar A135= 0160 bar A140 = 0200 bar A145= 0250 bar A155= 0400 bar A165 = 0600 bar A170 = 0700 bar A175 = 0800 bar	P 135= 02300 psi g P 140 = 0300 psi g P 145= 03600 psi g P 150 = 0500 psi g P 155= 05800 psi g P 160 = 07500 psi g P 165 = 010000 psi g YYY= special range, please specify in writing	housing SS 1.4571 instead of 1.4305 Y = O-ring FPM instead of NBR Y = O-ring PTFE (Kalrez) instead of NBR <100 bar Y = G ½ DIN 385-E inclusive seal ring Y = special <sup>3)</sup> connection <sup>2)</sup> on request, please specify in writing N = ½" NPT male						

<sup>1)</sup> Seawater resistant
2) Please specify in writing
3) Adapter of PSD usable


# 12. Dimensions

[in mm]

### **SEN-86**

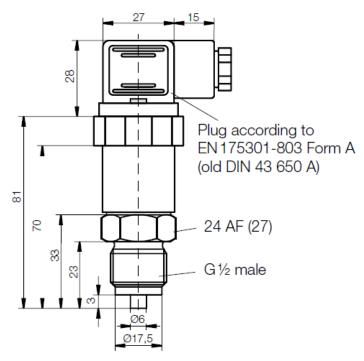

**SEN-87** 

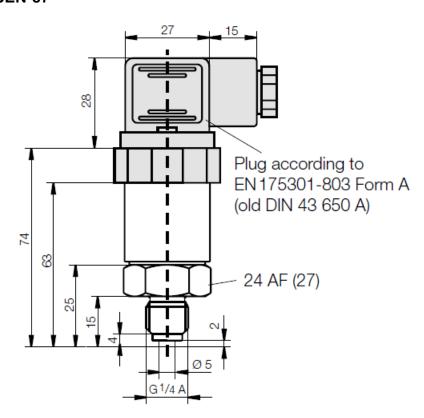


# 13. Disposal

### Note!

- Avoid environmental damage caused by media-contaminated parts
- Dispose of the device and packaging in an environmentally friendly manner
- Comply with applicable national and international disposal regulations and environmental regulations.

### **Batteries**

 Batteries containing pollutants are marked with a sign consisting of a crossed-out garbage can and the chemical symbol (Cd, Hg, Li or Pb) of the heavy metal that is decisive for the classification as containing pollutants:



- 1. "Cd" stands for cadmium
- 2. "Hg" stands for mercury
- 3. "Pb" stands for lead
- 4. "Li" stands for lithium

### **Electrical and electronic equipment**



### 14. EU Declaration of Conformance

We, KOBOLD-Messring GmbH, Hofheim-Ts, Germany, declare under our sole responsibility that the products:

Pressure Sensors models: SEN-86... and SEN-87...

to which this declaration relates in conformity with the standards noted below:

**EN 61326-1:2013** Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 1: General requirements

**EN 61326-2-3:2013** Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 2-3: Particular requirements - Test configuration, operational conditions and performance criteria for transducers with integrated or remote signal conditioning

**EN 50581:2012** Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Also, the following EC guidelines are fulfilled:

2014/30/EU EMC Directive

2014/68/EU PED

PS>200 bar; module A, pressure accessory **2011/65/EU RoHS** (category 9)

Hofheim, 23. Jan. 2018

H. Peters General Manager

Alle ppa. Wille

M. Wenzel Proxy Holder