

Operating Instruction for Turbine-wheel Flow Meter

Model: DRS



1. Contents

1.	Contents		2
2.	Note		3
3.	Instrument Inspection		
4.	Regulation Use		
5.	Operating Principle		
6.	Mechanical Connection		
	6.1.	Operational conditions check-up:	5
	6.2.	Mounting	5
7.	Electrical Connection		
	7.1.	General	6
	7.2.	Evaluation electronics Frequency output without Pt100	6
		Evaluation electronics: Frequency output and analogue output with	
		Pt100 (DRSP)	7
	7.4.	Evaluation electronics: analogue output (L)	7
	7.5.	Cable outlet with M12x1 angle plug electronic options F3x and L3x	9
	7.6.	Compact electronics: (C30R,C30M,C34P,C34N)	9
8.	Commissioning		10
	8.1.	Frequency output	10
	8.2.	Analogue output	10
	8.3.	Compact electronics	10
9.	Maint	Maintenance11	
10.	Technical Information1		11
11.	Order Codes1		11
12.	. Dimensions1		11
13.	3. Disposal1		12
14.	. EU Declaration of Conformance13		
15.	. UK Declaration of Conformity14		

Manufactured and sold by:

Kobold Messring GmbH Nordring 22-24 D-65719 Hofheim Tel.: +49(0)6192-2990

Fax: +49(0)6192-23398 E-Mail: info.de@kobold.com Internet: www.kobold.com

page 2 DRS K17/0823

2. Note

Please read and take note of these operating instructions before unpacking and putting the unit in operation and follow the instructions precisely as described herein.

The instruction manuals on our website www.kobold.com are always for currently manufactured version of our products. Due to technical changes, the instruction manuals available online may not always correspond to the product version you have purchased. If you need an instruction manual that corresponds to the purchased product version, you can request it from us free of charge by email (info.de@kobold.com) in PDF format, specifying the relevant invoice number and serial number. If you wish, the operating instructions can also be sent to you by post in paper form against an applicable postage fee.

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

The devices are only to be used, maintained and serviced by persons familiar with these operating instructions and with the prevailing regulation applying to procedural safety and the prevention of accidents.

When used in machines, the measuring unit should be used only then when the machines fulfil the EC-machine guide lines.

PED 2014/68/EU

In acc. with Article 4 Paragraph (3), "Sound Engineering Practice", of the PED 2014/68/EU no CE mark.

Table 8, Pipe, Group 1 dangerous fluids

3. Instrument Inspection

These devices are checked before shipping and sent out in perfect condition. Should damage to a device be visible, we recommend a thorough inspection of the delivery packaging. In case of damage, please inform your parcel service/forwarding agent immediately, since they are responsible for damages during transit.

Scope of delivery:

• Turbine-Wheel Flow Meter: Model DRS

4. Regulation Use

The DRS is to be installed only in the specified applications. Any use of the DRS sensor which exceeds the manufacturer's specifications may invalidate the warranty and any resulting damage is not the responsibility of the manufacturer. The user assumes all risk for such usage. The application specifications include the installation, start-up and service requirements specified by the manufacturer.

5. Operating Principle

The DRS flow meter operates on the turbine wheel principle. The liquid first flows through a laminar flow element that eliminates turbulence and routes the flow stream into the turbine wheel. The turbine wheel then starts to rotate. This rotary motion is sensed non-contacting by magnets embedded in the turbine wheel and converted to a frequency signal. The frequency is proportional to the flow velocity. Various outputs, such as frequency divider, analogue output or compact electronics with LED display with limit contacts are available as options. An integrated temperature sensor for simultaneous measuring of flow rate and temperature is also available as an additional option. The rotating vane is sapphire-supported: this ensures a high degree of linearity and long service life.

page 4 DRS K17/0823

6. Mechanical Connection

6.1. Operational conditions check-up:

- Flow volume
- max. operational pressure
- max. operational temperature



Attention! Exceeding prescribed ranges may cause damage to ball-bearings and considerable measurement errors may result.

6.2. Mounting

- Installation can take place in horizontal and ascending pipes, flow direction from bottom to top. Flow in the direction of the arrow.
- Pressure- and tensile loading is to be avoided on the connection threads.
 Inlet and outlet piping should be secured at least 50 mm away mechanically from the connections.
- Check the sealing of the connections
- The use of flat sealings is to be preferred. The sealing surfaces are shown in section 11 "Dimensions"

7. Electrical Connection

7.1. General



Attention! Ensure that the power ratings of your supply system are in agreement with the power ratings of the flow meter.


- Please ensure that the electric supply lines are not active.
- Wire the connection cable/plug with the supply line according to the following connection diagram.
- We recommend a cross-sectional area of 0.25 mm² for the supply line.



Attention! A false level on plug connections may cause destruction of unit's electronics.

7.2. Evaluation electronics Frequency output without Pt100

Plug connection(..F3000; ..F3200; ..F3400; ..F3900)

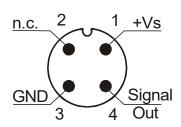

Plug connection (..F5000; ..F5200; ..F5400; ..F5900; ..K0000)

brown: + Vs blue: GND Black: Signal

...S0000 ...S000P

white: + Vs brown: + Vs green: Signal black: Signal

brown: GND green-yellow: GND/PT100-1


yellow: PT100-2

page 6 DRS K17/0823

7.3. Evaluation electronics:

Frequency output and analogue output with Pt100 (DRS-..P)

Plug connection (..F300P; ..F320P, ..F340P, ..F390P, ..L303P; ..L343P)

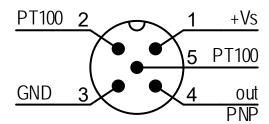


Cable connection (..F500P; ..F520P, ..F540P, F590P)

brown: +Vs blue: GND black: Signal


white: PT100 2-wire grey: PT100 2-wire

7.4. Evaluation electronics: analogue output (..L..)


3-conductor (..L303, ..L343)

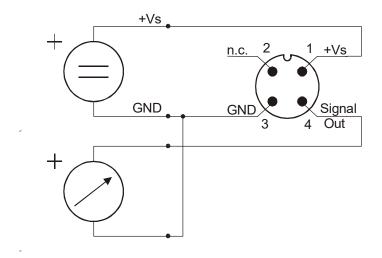

2-conductor (..L342)

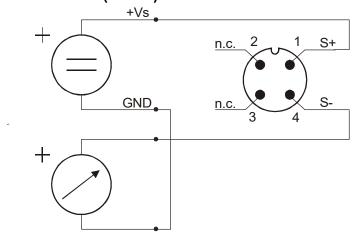


2-conductor, DIN-plug (DRS-...L442)

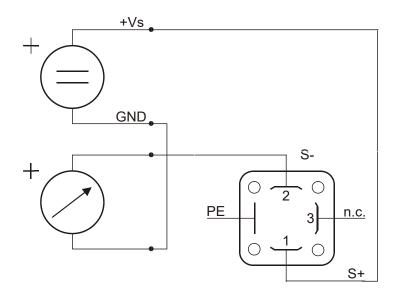

page 8 DRS K05/1116

7.5. Cable outlet with M12x1 angle plug electronic options F3x and L3x

When using a pre-assembled M12x1 connection cable with angled plug, the cable outlet is always aligned opposite to the flow direction.

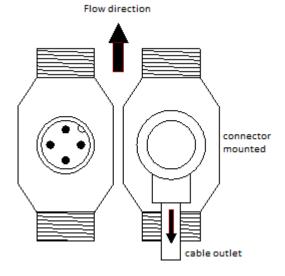

7.6. Compact electronics: (..C30R, ..C30M, ..C34P, ..C34N)

Please see

Operating Instruction Manual for compact electronics with frequency output

8. Commissioning

8.1. Frequency output

The measuring units are pre-adjusted and ready for operation after electrical connection.

8.2. Analogue output

The measuring units are pre-adjusted and ready for operation after electrical connection.

8.3. Compact electronics

Please see

Operating Instruction Manual for compact electronics with frequency output

page 10 DRS K05/1116

9. Maintenance

As long as the medium to be measured is not polluted, the measuring unit is maintenance-free. In order to avoid problems, we recommend installation of a filter, such as magnet filter, Model MFR.

Should cleaning be deemed necessary, the sensor must be uninstalled and rinsed thoroughly in clean water.

Work on electronics may only be carried out by the supplier, so that the product guaranty remains valid.

10. Technical Information

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

11. Order Codes

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

12. Dimensions

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

 
13. Disposal

Note!

- Avoid environmental damage caused by media-contaminated parts
- Dispose of the device and packaging in an environmentally friendly manner
- Comply with applicable national and international disposal regulations and environmental regulations.

Batteries

Batteries containing pollutants are marked with a sign consisting of a crossed-out garbage can and the chemical symbol (Cd, Hg, Li or Pb) of the heavy metal that is decisive for the classification as containing pollutants:



- 1. ,,Cd" stands for cadmium
- 2. "Hg" stands for mercury
- 3. "Pb" stands for lead
- 4. "Li" stands for lithium

Electrical and electronic equipment



page 12 DRS K05/1116

14. EU Declaration of Conformance

We, KOBOLD Messring GmbH, Nordring 22-24, 65719 Hofheim, Germany, declare under our sole responsibility that the product:

Turbine-wheel Flow Meter Model: DRS-...

to which this declaration relates is in conformity with the following EU directives stated below:

2014/30/EU EMC Directive 2011/65/EU RoHS (category 9)

2015/863/EU Delegated Directive (RoHS III)

Also, the following standards are fulfilled:

EN IEC 61326-1:2021

Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 1: General requirements, Industrial area

EN 60529:2014

Degrees of protection provided by enclosures (IP Code)

EN IEC 63000:2018

Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Hofheim, 20 Sept 2023

H. Volz J. Burke General Manager Compliance Manager

15. UK Declaration of Conformity

We, KOBOLD Messring GmbH, Nordring 22-24, 65719 Hofheim, Germany, declare under our sole responsibility that the product:

Turbine-wheel Flow Meter model: DRS-...

to which this declaration relates is in conformity with the following UK directives stated below:

S.I. 2016/1091 Electromagnetic Compatibility Regulations 2016

S.I. 2012/3032 The Restriction of the Use of Certain Hazardous

Substances in Electrical and Electronic Equipment

Regulations 2012

Also, the following standards are fulfilled:

BS EN IEC 61326-1:2021

Electrical equipment for measurement, control and laboratory use. EMC requirements. General requirements, Industrial area

BS EN 60529:1992+A2:2013

Degrees of protection provided by enclosures (IP Code)

BS EN IEC 63000:2018

Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.

Hofheim, 20 Sept 2023

H. Volz J. Burke General Manager Compliance Manager

page 14 DRS K05/1116