

Operating Instructions for Rotating Vane Flow Meter

Model: DFT



1. Contents

1.	Contents					
2.	Note					
3.	Instrument Inspection					
4.	Regu	Regulation Use4				
5.	Opera	Operating Principle				
6.	Mechanical Connection					
7.	Electrical Connection					
	7.1	General				
	7.2	Evaluating Electronics (DFT0000,F400;F490,L403,L443)	.6			
	7.3	Evaluating Electronics DFTL442	.6			
	7.4	MA-Electronics (DFTM)	. 7			
	7.5	WM-Electronics (DFTW)				
	7.6	DFT-K/E/G (only with cable connection)	3.			
8.	Operation					
	8.1	MA Electronic (DFTM)				
	8.2	WM Electronic (DFTW)	10			
	8.3	K/E/G-Electronic	11			
		Commissioning1				
). Technical Information12					
	. Order Codes12					
	2. Dimensions12					
	3. Disposal1					
	4. EU Declaration of Conformance14					
15.	5. UK Declaration of Conformity15					

Manufactured and sold by:

Kobold Messring GmbH Nordring 22-24 D-65719 Hofheim Tel.: +49(0)6192-2990

Fax: +49(0)6192-23398 E-Mail: info.de@kobold.com Internet: www.kobold.com

page 2 DFT K06/0923

2. Note

Please read these operating instructions before unpacking and putting the unit into operation. Follow the instructions precisely as described herein.

The instruction manuals on our website www.kobold.com are always for currently manufactured version of our products. Due to technical changes, the instruction manuals available online may not always correspond to the product version you have purchased. If you need an instruction manual that corresponds to the purchased product version, you can request it from us free of charge by email (info.de@kobold.com) in PDF format, specifying the relevant invoice number and serial number. If you wish, the operating instructions can also be sent to you by post in paper form against an applicable postage fee.

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

The devices are only to be used, maintained and serviced by persons familiar with these operating instructions and in accordance with local regulations applying to Health & Safety and prevention of accidents.

When used in machines, the measuring unit should be used only when the machines fulfil the EC-machine guidelines.

as per PED 2014/68/EU

In acc. with Article 4 Paragraph (3), "Sound Engineering Practice", of the PED 2014/68/EU no CE mark.

3. Instrument Inspection

Instruments are inspected before shipping and sent out in perfect condition. Should damage to a device be visible, we recommend a thorough inspection of the delivery packaging. In case of damage, please inform your parcel service / forwarding agent immediately, since they are responsible for damages during transit.

Scope of delivery:

The standard delivery includes:

• Rotating Vane Flow Meter model: DFT

4. Regulation Use

Any use of the Rotating Vane Flow Meter, model: DFT, which exceeds the manufacturer's specifications, may invalidate its warranty. Therefore, any resulting damage is not the responsibility of the manufacturer. The user assumes all risk for such usage.

5. Operating Principle

The established vane technology has proven itself a million times world wide for measuring and monitoring the flow of different media through piping. KOBOLD flow meters/monitors work with this proven principle and offer many benefits.

The heart of the new KOBOLD vane is an embedded ring magnet; it is hermetically sealed from the flow medium. It transfers, in a non-contacting manner, the rotary motion of the vane to a Hall sensor attached to the case (in order to save space). This converts the rotary motion to a frequency signal that is proportional to the flow rate. The downstream KOBOLD evaluating electronics can output this signal to a display, convert it to (0(4)-20 mA, 0-10 V) analogue signal, or count it. It may also be used to switch up to two limit contacts. The ready and control states of the limit value relay are indicated by LEDs.

The modular design of KOBOLD flow monitors and measuring instruments is a system that can be universally applied; it is reasonably priced; and requires minimum space when in service. Very precise measurement results can be achieved under tough operating conditions with the KOBOLD electronics. The system is assembled with the electronics and delivered ready for service. The electronics are adjusted and tuned for use with the sensor. When retrofitted for other measuring ranges, the system may be readjusted with a similar device at any time.

page 4 DFT K06/0923

6. Mechanical Connection

Before installation

 Please ascertain whether the actual flow throughput matches the flow range of the instrument. The flow range may be obtained from the label.



Warning! If the measuring range is exceeded by more than 20%, bearing damage may occur.

- Remove all packing materials and transport retainers and ensure that no such materials remain in the device.
- Make sure that the maximum operating pressure and temperature of the device are not exceeded. (see section Fehler! Verweisquelle konnte nicht gefunden werden. Fehler! Verweisquelle konnte nicht gefunden werden.)
- Mount the flow indication tension-free into the pipe.
- Protect the measuring tube from external damage.
- Avoid pressure surges in the measuring tube, such as those arising from fast start up/shut off of flow or pulsating flow.
- The contact-version units may not be installed at a location within an inductive field.
- If possible, it should be checked after mechanical installation, to see if the connections between union fittings and pipes are properly sealed

7. Electrical Connection

7.1 General




Caution! Make sure that the voltage values of your system correspond with the voltage values of the measuring unit.

- Make sure that the supply wires are de-energized.
- Connect the power supply and the evaluation off the output signal to the pins of the plug described below.




Warning! Incorrect wiring of the connections in the coupling plug can lead to the electronics being destroyed.

7.2 Evaluating Electronics (DFT-..0000, ..F400; ..F490, ..L403, ..L443)

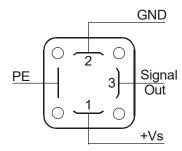


7.3 Evaluating Electronics DFT-....L442

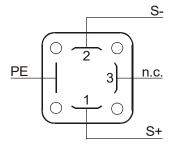

page 6 DFT K06/0923


7.4 MA-Electronics (DFT-...M..)



Cable connection

Wire no. 1 = power supply (-) \sim Wire no. 2 = power supply (+) \sim Wire no. 3 = anlaogue output (+)

7.5 WM-Electronics (DFT-...W..)

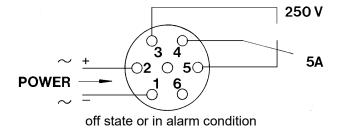

Cable connection

Wire no: 1= power supply (-) Wire no. 2= power supply (+)

Wire no. 3 Wire no. 4

vvire no. 4

Wire no. 5

7.6 DFT-K/E/G (only with cable connection)

Wire number	DFT-K	DFT-E	DFT-G
1	+24 V _{DC}	+24 V _{DC}	+24 V _{DC}
2	GND	GND	GND
3	4-20 mA	4-20 mA	4-20 mA
4	GND	GND	GND
5	d.c. *)	d.c. *)	Ctrl 1 *)
6	d.c. *)	Reset TM *)	Ctrl 2 *)
7	relay S1 N/O	relay S1 N/O	relay S1 N/O
8	relay S1 COM	relay S1 COM	relay S1 COM
9	relay S2 N/O	relay S2 N/O	relay S2 N/O
10	relay S2 COM	relay S2 COM	relay S2 COM


page 8 DFT K06/0923

8. Operation

8.1 MA Electronic (DFT-...M..)

The device is delivered ready for use. The electronics have been calibrated and fine tuned to the sensor. The calibrating screws (0(4)-20 mA) are behind an adhesive film and must not be adjusted by the customer. Adjustment by the customer means that a re-calibration is necessary (and this is chargeable). Unauthorised opening cancels the guarantee.


As soon as the external power supply to the device is switched on, a green light emitting diode indicates that it is ready for use.

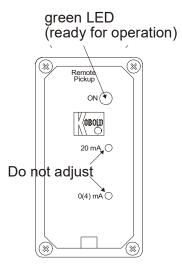

8.2 WM Electronic (DFT-...W..)

The device is delivered ready for use. The electronics have been calibrated and fine tuned to the sensor. The calibrating screws ("Zero" and "Range"), next to the scale button, must not be adjusted by the customer. Adjustment by the customer means that a re-calibration is necessary (and this is chargeable). Unauthorised opening cancels the guarantee.

As soon as the external power supply to the device is switched on, a green light emitting diode indicates that it is ready for use. The red "Alarm" Light emitting diode flashes.

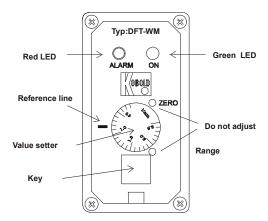



Attention! When the red light emitting diode is flashing the limit value relay is in alarm condition (see connection diagram).

The DF-WM has a relay output for monitoring the flow. The condition of the relay is indicated with a flashing red light emitting diode. The contact is in the form of a minimum contact, i.e. if the reading drops below the set value the limit value relay is in alarm condition (flashing red light emitting diode).



Attention! The limit value relay also goes into alarm condition in the event of a line break or power outage.

page 10 DFT K06/0923

Setting the limit value

Loosen the 4 screws on the transparent electronics cover and remove it.

The limit value is set using the value setter.

Turn the value setter to the desired limit value on the scale to the reference line to the left of the scale on the font plate.

Calling up the current flow through reading

To measure the actual flow rate, it is first necessary to press the red key. This bypasses the limit value relay and puts it out of action. The flow through can be determined by simultaneously turning the value setter from the smallest to the greatest value until the red LED flashes, at which point the flowrate can be read from the scale on the value setter. After the flow through reading has been read the value setter is reset to the desired limit value and the button key is released.



Attention! After setting the limit value relay, or calling up the flow through, screw the transparent cover tightly back onto the electronics housing. Make sure the flat gasket is sitting correctly.

8.3 K/E/G-Electronic

Detailed information about the functions and operation, refer to the operating instructions "ZED-K", "ZED-ZL" and "ZED-ZL".

9. Commissioning

To avoid pressure surges, the flow medium should be slowly introduced into the instrument.



Warning! Pressure surges from solenoid valves, ball valves or similar devices may lead to breakage of the instrument (water hammer). In the operating condition it must be ensured that the instrument housing is continuously filled with the flow medium.

Warning! Large air bubbles in the instrument housing can lead to measuring errors or destruction of the bearings.

10. Technical Information

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

11. Order Codes

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

12. Dimensions

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

page 12 DFT K06/0923


13. Disposal

Note!

- Avoid environmental damage caused by media-contaminated parts
- Dispose of the device and packaging in an environmentally friendly manner
- Comply with applicable national and international disposal regulations and environmental regulations.

Batteries

Batteries containing pollutants are marked with a sign consisting of a crossed-out garbage can and the chemical symbol (Cd, Hg, Li or Pb) of the heavy metal that is decisive for the classification as containing pollutants:



- 1. "Cd" stands for cadmium
- 2. "Hg" stands for mercury
- 3. "Pb" stands for lead
- 4. "Li" stands for lithium

Electrical and electronic equipment



14. EU Declaration of Conformance

We, KOBOLD Messring GmbH, Nordring 22-24, 65719 Hofheim, Germany, declare under our sole responsibility that the product:

Rotating Vane Flow Meter Model: DFT

to which this declaration relates is in conformity with the following EU directives stated below:

2014/30/EU EMC Directive

2014/35/EU Low Voltage Directive

2011/65/EU RoHS

2015/863/EU Delegated Directive (RoHS III)

Also, the following standards are fulfilled:

EN 61000-6-4:2011

Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments

EN 61000-6-2:2006

Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments

EN 61010-1:2011

Safety requirements for electrical equipment for measurement, control and laboratory use - Part 1: General requirements

EN 60529:2014

Degrees of protection provided by enclosures (IP Code)

EN IEC 63000:2018 Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Hofheim, 06 Sept. 2023

H. Volz J. Burke General Manager Compliance Manager

page 14 DFT K06/0923

15. UK Declaration of Conformity

We, KOBOLD Messring GmbH, Nordring 22-24, 65719 Hofheim, Germany, declare under our sole responsibility that the product:

Rotating Vane Flow Meter Model: DFT

to which this declaration relates is in conformity with the following UK directives stated below:

S.I. 2016/1091	Electromagnetic Compatibility Regulations 2016					
S.I. 2016/1101	Electrical Equipment (Safety) Regulations 2016					
S.I. 2012/3032	The Restriction of the Use of Certain Hazardous					
	Substances in Electrical and Electronic Equipment					
	Regulations 2012					

Also, the following standards are fulfilled:

BS EN 61000-6-4:2007+A1:2011

Electromagnetic compatibility (EMC). Generic standards. Emission standard for industrial environments

BS EN 61000-6-2:2005

Electromagnetic compatibility (EMC). Generic standards. Immunity for industrial environments

BS EN 61010-1:2010

Safety requirements for electrical equipment for measurement, control, and laboratory use. General requirements

BS EN 60529:1992+A2:2013

Degrees of protection provided by enclosures (IP-Code)

BS EN IEC 63000:2018

Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.

Hofheim, 06. Sept.2023

H. Volz J. Burke General Manager Compliance Manager