

Operating Instructions for

Digital Indicating Unit

Standard signals 0/4-20 mA, 0-10 VDC

Model: DAG-M3V..., 96 x 24 mm



We don't accept warranty and liability claims neither upon this publication nor in case of improper treatment of the described products.

The document may contain technical inaccuracies and typographical errors. The content will be revised on a regular basis. These changes will be implemented in later versions. The described products can be improved and changed at any time without prior notice.

© **Copyright**

All rights reserved.

1. Contents

1. Contents.....	2
2. Note	4
3. Instrument Inspection	4
4. Regulation Use	5
5. Brief description	5
6. Assembly	6
7. Electrical Connection	7
8. Function description and operation	9
9. Setting up the device.....	11
9.1 Switching on	11
9.2 Standard parameterization (Flat operation level)	11
9.3 Programming interlock RUN	14
9.4 Extended parameterization (Professional operation level).....	15
10. Reset to default values.....	31
11. Alarms / Relays	32
12. Interfaces	34
13. Sensor alignment offset / final value	35
14. Technical Information.....	36
15. Order Codes	36
16. Dimensions	36
17. Safety advices.....	36
18. Error elimination	38
19. Disposal	39
20. EU Declaration of Conformance	40
21. UK Declaration of Conformity.....	41
22. Appendix MODBUS Device Interface.....	42

Manufactured and sold by:

Kobold Messring GmbH
Nordring 22-24
D-65719 Hofheim
Tel.: +49(0)6192-2990
Fax: +49(0)6192-23398
E-Mail: info.de@kobold.com
Internet: www.kobold.com

2. Note

Please read these operating instructions before unpacking and putting the unit into operation. Follow the instructions precisely as described herein.

The instruction manuals on our website www.kobold.com are always for currently manufactured version of our products. Due to technical changes, the instruction manuals available online may not always correspond to the product version you have purchased. If you need an instruction manual that corresponds to the purchased product version, you can request it from us free of charge by email (info.de@kobold.com) in PDF format, specifying the relevant invoice number and serial number. If you wish, the operating instructions can also be sent to you by post in paper form against an applicable postage fee.

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

The devices are only to be used, maintained and serviced by persons familiar with these operating instructions and in accordance with local regulations applying to Health & Safety and prevention of accidents.

When used in machines, the measuring unit should be used only when the machines fulfil the EC machinery directive.

3. Instrument Inspection

Instruments are inspected before shipping and sent out in perfect condition.

Should damage to a device be visible, we recommend a thorough inspection of the delivery packaging. In case of damage, please inform your parcel service / forwarding agent immediately, since they are responsible for damages during transit.

Scope of delivery:

The standard delivery includes:

- Digital Indicating Unit model: DAG-M3V

4. Regulation Use


Any use of the device, which exceeds the manufacturer's specification, may invalidate its warranty. Therefore, any resulting damage is not the responsibility of the manufacturer. The user assumes all risk for such usage.

5. Brief description

The panel meter instrument **DAG-M3V** is a 5-digit device for direct current / direct voltage signals and a visual threshold value monitoring via the display. The configuration happens via four keys at the front. The integrated programming interlock prevents unrequested changes of parameters and can be unlocked again with an individual code. Optional the following functions are available: a supply for the sensor, a digital input for triggering of Hold (Tara), one analog output and for further evaluating in the unit. With help of the two galvanic insulated setpoints (optional), free adjustable limit values can be controlled and reported to a superior master display. The electrical connection is done via plug-in terminals on the back side. Selectable functions like e.g. the recall of the min/max-value, an averaging of the measuring signals, a nominal presetting or setpoint presetting, a direct threshold value regulation during operation mode and further measuring setpoints for linearization, complete the modern device concept.

6. Assembly

Please read the Safety advices on *page 36* before installation and keep this user manual for future reference.

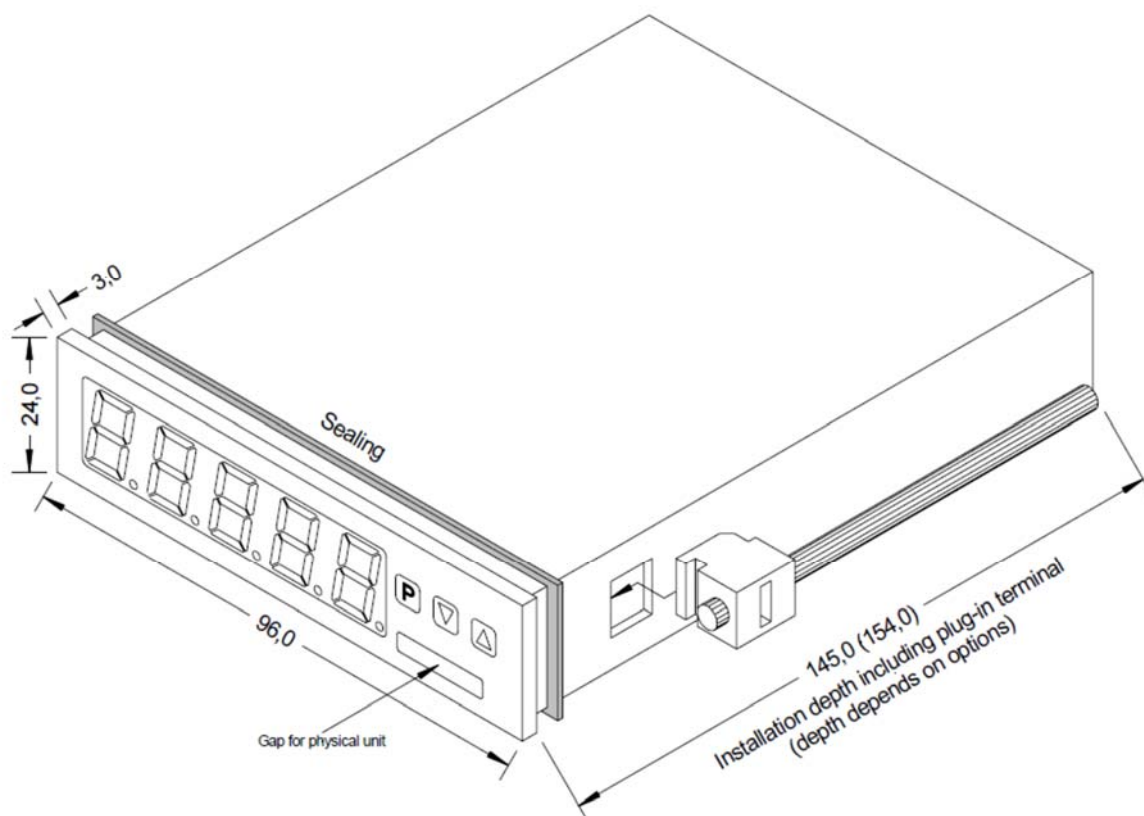


1. After removing the fixing elements, insert the device.
2. Check the seal to make sure it fits securely.
3. Click the fixing elements back into place and tighten the clamping screws by hand. Then use a screwdriver to tighten them another half a turn.

CAUTION! The torque should not exceed 0.1 Nm!

7. Electrical Connection

Type DAG-M3V8 supply 100-240 VAC 50/60Hz, DC $\pm 10\%$


Type DAG-M3V7 supply 10-40 VDC galv. Isolated, 18-30 VAC 50/60Hz

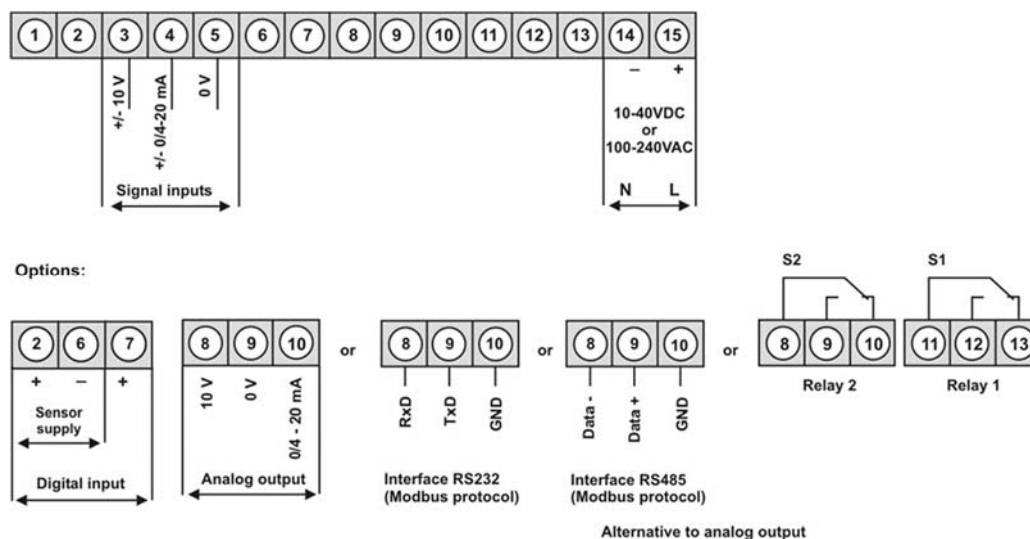


Connection examples

Below please find some connection examples that show practical applications. For devices with current inputs / Voltage inputs, without sensor supply.


DAG-M3V in combination with a 2-wire-sensor 4-20 mA

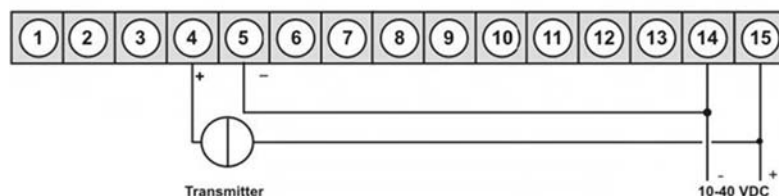

DAG-M3V in combination with a 3-wire-sensor 0-10 V

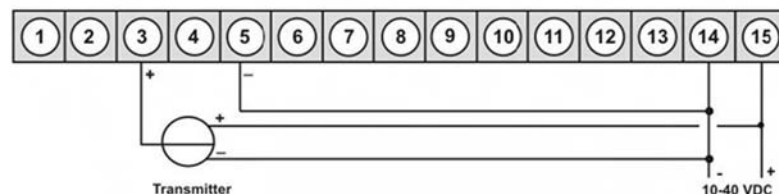

DAG-M3V in combination with a 3-wire-sensor 0/4-20 mA

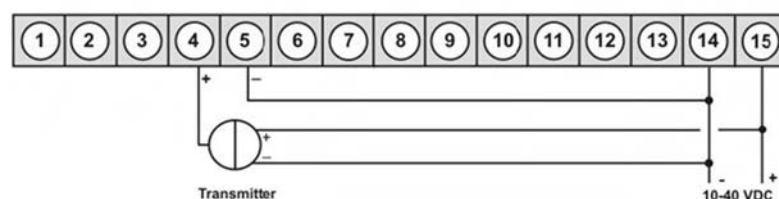


DAG-M3V


DAG-M3V devices

With current respectively voltage input in combination with a 24 VDC sensor supply.


2-wire-sensor 4-20 mA

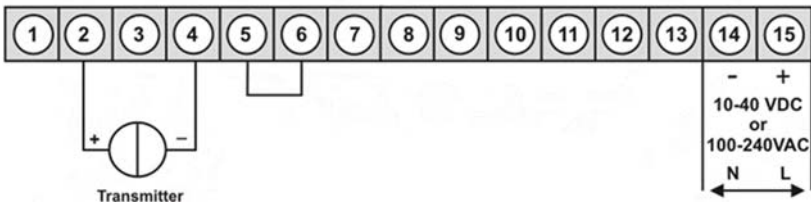


3-wire-sensor 0-20 mA

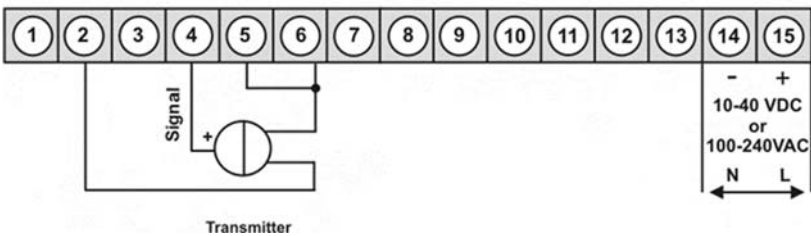


3-wire-sensor 0-10 V

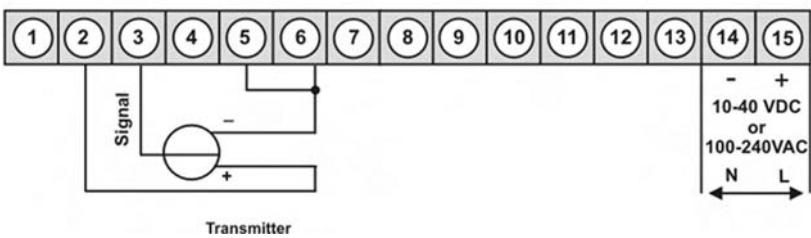

DAG-M3V with digital input in combination with a 24 VDC sensor supply

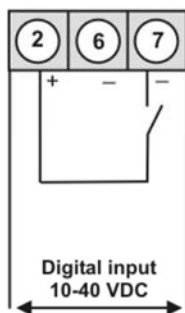

DAG-M3V with digital input and external voltage source

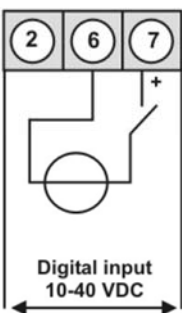

8. Function description and operation

Operation

The operation is divided into three different levels.

Menu level (delivery status)













This level is for the standard settings of the device. Only menu items which are sufficient to set the device into operation are displayed. To get into the professional level, run through the menu level and parameterize “**prof**” under menu item **RUN**.

Menu group level (complete function volume)


Suited for complex applications as e.g. linkage of alarms, setpoint treatment, totalizer function etc. In this level function groups which allow an extended parameterization of the standard settings are available. To leave the menu group level, run through this level and parameterize “**uloc**” under the menu item **RUN**.

Parameterization level

Parameter deposited in the menu item can here be parameterized. Functions, that can be changed or adjusted, are always signalized by a flashing of the display. Settings that are made in the parameterization level are confirmed with **[P]** and thus saved. By pressing the **[0]-key** it leads to a break-off of the value input and to a change into the menu level. All adjustments are saved automatically by the device and changes into operating mode, if no further key operation is done within the next 10 seconds.

Level	Key	Description
Menu-level		Change to parameterisation level and deposited values.
	 	Keys for up and down navigation in the menu level.
		Change into operation mode.
Parameterisation-level		To confirm the changes made at the parameterization level.
	 	Adjustment of the value / the setting.
		Change into menu level or break-off in value input.
Menu-group-level		Change to menu level.
	 	Keys for up and down navigation in the menu group level.
		Change into operation mode or back into menu level.

Function chart:

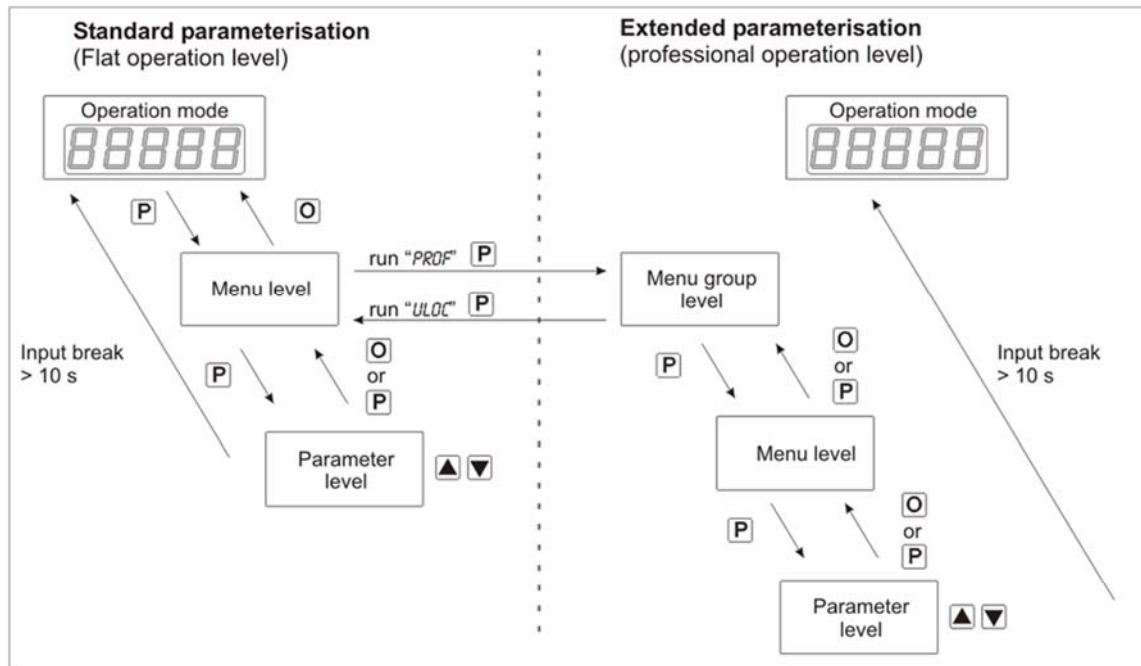

Underline:

- P** Takeover
- O** Stop
- ▲ Value selection (+)
- ▼ Value selection (-)

9. Setting up the device

9.1 Switching on

Once the installation is complete, you can start the device by applying the voltage supply. Before, check once again that all electrical connections are correct.




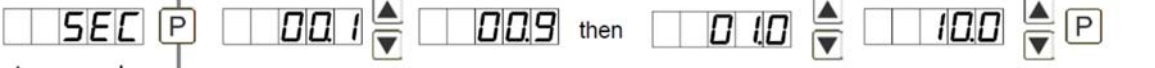








Starting sequence



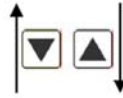





For 1 second during the switching-on process, the segment test (8 8 8 8 8) is displayed followed by an indication of the software type and, after that also for 1 second the software version. After the starting sequence, the device switches to operation / display mode.

9.2 Standard parameterization (Flat operation level)

To parameterize the display, press the [P] key in operating mode for 1 second. The display then changes to the menu level with the first menu item **TYPE**.

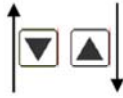Menu level	Parameterisation level
	<p>Selection of the input signal, TYPE: Default: <i>SENS.U</i></p> <p>Available as measuring input options are 0-20 mA, 4-20 mA or 0-10 VDC signals as works calibration (without application of the sensor signal) and <i>SENSU</i> (voltage) or <i>SENSA</i> (current) as sensor calibration (with the sensor applied). Confirm the selection with [P] and the display switches back to menu level.</p>
	<p>Setting the end value of the measuring range, END: Default: <i>10000</i></p> <p>Set the end value from the smallest to the highest digit with [▲] [▼] and confirm each digit with [P]. A minus sign can only be parameterized on the highest value digit. After the last digit, the display switches back to the menu level. If <i>SENS</i> was selected as input option, you can only select between <i>NOCA</i> and <i>CAL</i>. With <i>NOCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</p>
	<p>Setting the start/offset value of the measuring range, OFFS: Default: <i>0</i></p> <p>Enter the start/offset value from the smallest to the highest digit with [▲] [▼] and confirm each digit with [P]. After the last digit the display switches back to the menu level. If <i>SENS</i> was selected as input option, you can only select between <i>NOCA</i> and <i>CAL</i>. With <i>NOCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</p>

Menu level	Parameterisation level
	Setting the decimal point, DOT: Default: 0  <p>The decimal point on the display can be moved with [▲] [▼] and confirmed with [P]. The display then switches back to the menu level again.</p>
	Setting up the display time, SEC: Default: 1.0  <p>The display time is set with [▲] [▼]. The display moves up in increments of 0.1 sec up to 1 sec and in increments of 1.0 sec up to 10.0 sec. Confirm the selection by pressing the [P] button. The display then switches back to the menu level again.</p>
	Selection of analog output, OUT.RR: Default: 4-20  <p>Three output signals are available: 0-10 VDC, 0-20 mA and 4-20 mA, with this function, the demanded signal is selected.</p>
	Setting up the final value of the analog output, OUT.EN: Default: 10000  <p>The final value is adjusted from the smallest digit to the highest digit with [▲] [▼] and digit by digit confirmed with [P]. A minus sign can only be parameterised on the highest digit. After the last digit, the device changes back into menu level.</p>
	Setting up the initial value of the analog output, OUT.OF: Default: 00000  <p>The final value is adjusted from the smallest digit to the highest digit with [▲] [▼] and digit by digit confirmed with [P]. A minus sign can only be parameterised on the highest digit. After the last digit, the device changes back into menu level.</p>
	Threshold values / Limits, LI-1: Default: 2000  <p>This value defines the threshold, that activates/deactivates an alarm.</p>

Menu level	Parameterisation level
	<p>Hysteresis for limit values, HY-1: Default: 00000</p> <p>  </p> <p>The delayed reaction of the alarm is the difference to the threshold value, which is defined by the hysteresis.</p>
	<p>Function for threshold value undercut /exceedance, FU-1: Default: HIGH</p> <p>  </p> <p>A limit value undercut is selected with <i>LOW</i> (for LOW = lower limit value), a limit value exceedance with <i>HIGH</i> (for HIGH = higher limit value). If e.g. limit value 1 is on a threshold level of 100 and allocated with function <i>HIGH</i>, an alarm is activated by reaching of the threshold level. If the threshold value was allocated to <i>LOW</i>, an alarm will be activated by undercutting the threshold value, as long as the hysteresis is zero.</p>
	<p>The same applies to U-2 !</p>
	<p>User code (4-digit number-combination, free available), U.CODE: Default: 0000</p> <p>  </p> <p>If this code was set (>0000), all parameters are locked for the user, if <i>LOC</i> has been selected before under menu item <i>RUN</i>. By pressing [P] for 3 seconds in operation mode, the display shows <i>CODE</i>. The <i>U.CODE</i> needs to be entered to get to the reduced number of parameter sets. The code has to be entered before each parameterisation, until the <i>R.CODE</i> (Master code) unlocks all parameters again.</p>
	<p>Master code (4-digit number-combination, free available), R.CODE: Default: 1234</p> <p>  </p> <p>All parameters can be unlocked with this code, after <i>LOC</i> has been activated under menu item <i>RUN</i>. By pressing [P] for 3 seconds in operation mode, the display shows <i>CODE</i> and enables the user to reach all parameters by entering the <i>R.CODE</i>. Under <i>RUN</i> the parameterisation can be activated permanently by selecting <i>ULOC</i> or <i>PROF</i>, thus at an anew pushing of [P] in operation mode, the code needs not to be entered again.</p>







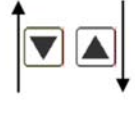
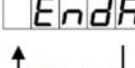

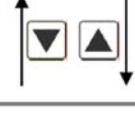
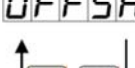

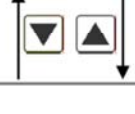
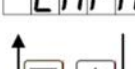




9.3 Programming interlock RUN



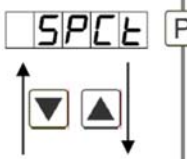

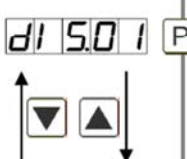

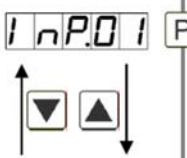

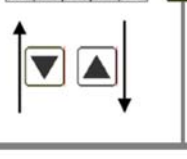

Menu level	Parameterisation level
	Activation / deactivation of the programming lock or completion of the standard parameterisation with change into menu group level (complete function range), <i>RUN</i> . Default: <i>ULOC</i>
<div><div><div>run</div><div>P</div></div><div><div>ULOC</div><div>LOC</div><div>PROF</div><div>P</div></div></div>	<p>With the navigation keys [▲] [▼], you can choose between the deactivated key lock <i>ULOC</i> (works setting) and the activated key lock <i>LOC</i>, or the change into the menu group level <i>PROF</i>. Confirm the selection with [P]. After this, the display confirms the settings with "- - - -", and automatically switches to operating mode. If <i>LOC</i> was selected, the keyboard is locked. To get back into the menu level, press [P] for 3 seconds in operating mode. Now enter the <i>CODE</i> (works setting 1 2 3 4) that appears using [▲] [▼] plus [P] to unlock the keyboard. <i>FAIL</i> appears if the input is wrong. To parameterise further functions <i>PROF</i> needs to be set. The device confirms this setting with „- - - -“, and changes automatically in operation mode. By pressing [P] for approx. 3 seconds in operation mode, the first menu group <i>INP</i> is shown in the display and thus confirms the change into the group extended parameterisation. It stays activated as long as <i>ULOC</i> or <i>LOC</i> is entered in menu group <i>RUN</i>.</p>

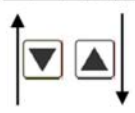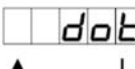

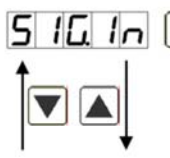
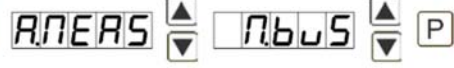
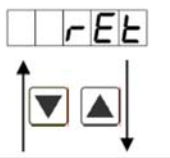
9.4 Extended parameterization (Professional operation level)

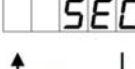9.4.1 Signal input parameters


Menu group level	
<div><div>- I n P -</div><div><div>▲</div><div>▼</div></div><div><div>▲</div><div>▼</div></div></div>	<div>P</div> → <div>Menu level</div>
Menu level	Parameterisation level
<div><div>TYPE</div><div><div>▲</div><div>▼</div></div></div>	<div>Selection of the input signal, <i>TYPE</i>:</div> <div>Default: <i>SENS.U</i></div> <div><div>0-10</div><div><div>▲</div><div>▼</div></div><div>0-20</div><div><div>▲</div><div>▼</div></div><div>4-20</div><div><div>▲</div><div>▼</div></div><div>SENS.U</div><div><div>▲</div><div>▼</div></div></div> <div><div>SENS.A</div><div><div>▲</div><div>▼</div></div><div>P</div></div> <div>There are several measuring input options: 0-20 mA, 4-20 mA or 0-10 VDC signals as works calibration (without application of the sensor signal) and <i>SENS.U</i> (voltage) or <i>SENS.A</i> (current) as sensor calibration (with the sensor applied). Confirm the selection with [P] and the display switches back to menu level.</div>
<div><div>End</div><div><div>▲</div><div>▼</div></div></div>	<div>Setting the end value of the measuring range, <i>END</i>:</div> <div>Default: <i>10000</i></div> <div><div>8</div><div>P</div><div>8</div><div>P</div><div>8</div><div>P</div><div>8</div><div>P</div><div>8</div><div><div>▲</div><div>▼</div></div></div> <div><div>nOCCA</div><div><div>▲</div><div>▼</div></div><div>P</div></div> <div><div>CAL</div><div><div>▲</div><div>▼</div></div><div>P</div></div> <div>Set the end value from the smallest to the highest digit with [▲] [▼] and confirm each digit with [P]. A minus sign can only be parameterized on the highest value digit. After the last digit, the display switches back to the menu level. If <i>SENS</i> was selected as input option, you can only select between <i>nOCCA</i> and <i>CAL</i>. With <i>nOCCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</div>
<div><div>OFFS</div><div><div>▲</div><div>▼</div></div></div>	<div>Setting up the start/offset value of the measuring range, <i>OFFS</i>:</div> <div>Default: <i>0</i></div> <div><div>8</div><div>P</div><div>8</div><div>P</div><div>8</div><div>P</div><div>8</div><div>P</div><div>8</div><div><div>▲</div><div>▼</div></div></div> <div><div>nOCCA</div><div><div>▲</div><div>▼</div></div><div>P</div></div> <div><div>CAL</div><div><div>▲</div><div>▼</div></div><div>P</div></div> <div>Enter the start/offset value from the smallest to the highest digit with [▲] [▼] and confirm each digit with [P]. After the last digit the display switches back to the menu level. If <i>SENS</i> was selected as input option, you can only select between <i>nOCCA</i> and <i>CAL</i>. With <i>nOCCA</i>, only the previously set display value is taken over, and with <i>CAL</i>, the device takes over both the display value and the analogue input value.</div>



Menu level	Parameterisation level
	Setting the decimal point, DOT: Default: 0   <p>The decimal point on the display can be moved with [▲] [▼] and confirmed with [P]. The display then switches back to the menu level again.</p>
	Setting up the display time, SEC: Default: 1.0   <p>The display time is set with [▲] [▼]. The display moves up in increments of 0.1 sec up to 1 sec and in increments of 1.0 sec up to 10.0 sec. Confirm the selection by pressing the [P] button. The display then switches back to the menu level again.</p>
	Rescaling the measuring input values, ENDR: Default: 10000   <p>With this function, you can rescale the input value of e.g. 19.5 mA (works setting) without applying a measuring signal. If sensor calibration has been selected, these parameters are not available.</p>
	Rescaling the measuring input values, OFFSA: Default: 0   <p>With this function, you can rescale the input value of e.g. 3.5 mA (works setting) without applying a measuring signal. If sensor calibration has been selected, these parameters are not available.</p>
	Setting up the tare/offset value, TARA: Default: 0   <p>The given value is added to the linearized value. In this way, the characteristic line can be shifted by the selected amount.</p>
	Setting up the balance point, ADJ.PT: Default: 08000   <p>The balance point for the final value can be chosen from the measuring range by <i>SENS.U</i> with 0...10 V or <i>SENS.A</i> with 0...20 mA in %. The preset 80.000% result from the widespread detuning of the melt pressure sensors.</p>

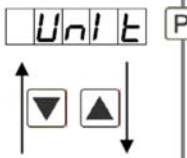

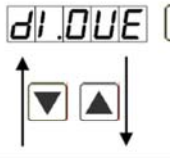
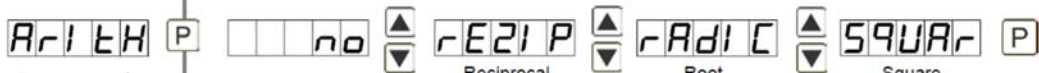
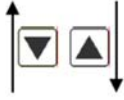


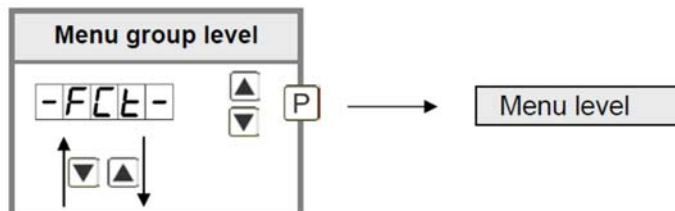


Menu level	Parameterisation level
	<p>Setting up the physical unit, UNIT: Default: <i>NO</i></p>  <p>One can choose between the above shown physical units. It will be displayed on the 5th digit of the display.</p>
	<p>Number of additional setpoints, SPCT: Default: <i>00</i></p>  <p>30 additional setpoints can be defined to the initial- and final value, so linear sensor values are not linearised. Only activated setpoint parameters are displayed.</p>
	<p>Display values for setpoints, DIS.01 ... DIS.30:</p>  <p>Under this parameter setpoints are defined according to their value. At the sensor calibration, like at Endwert/Offset, one is asked at the end if a calibration shall be activated.</p>
	<p>Analog values for setpoints, INP.01 ... INP.30:</p>  <p>The setpoints are allways set according to the selected input signal. The desired analog values can be freely parametrised in ascending order.</p>
	<p>Device undercut, DI.UND: Default: <i>-9999</i></p>  <p>With this function the device undercut (_____) can be defined on a definite value. Exception is input type 4-20 mA, it already shows undercut at a signal <1 mA, so a sensor failure is marked.</p>

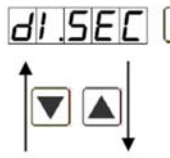

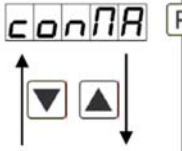

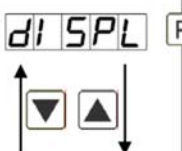
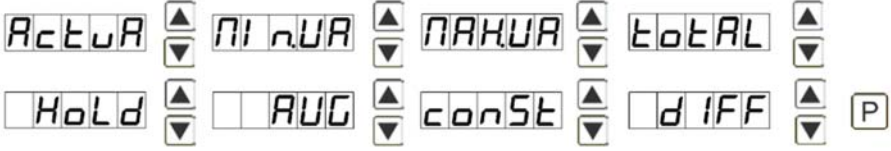
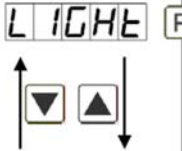

Menu level	Parameterisation level
	<p>Display overflow, <i>DI.OUE</i>: Default: 99999</p>  <p>With this function the display overflow (-----) can be defined on a definite value.</p>
	<p>Input variable of process value, <i>SIG.IN</i>: Default: <i>A.MEAS</i></p>  <p>With this parameter, the device can be controlled via the analog input signals <i>A.MEAS</i> = 0-20 mA, 4-20 mA or 0-10 VDC or via the digital signals of the interface <i>n.BUS</i> = RS232/RS485 (Modbus protocol). With [P] the selection is confirmed and the device changes into menu level.</p>
	<p>Back to menu group level, <i>RET</i>:</p> <p>With [P] the selection is confirmed and the device changes into menu group level „-INP-“.</p>

9.4.2 General device parameters



Menu level	Parameterisation level
	<p>Display time, <i>DI.SEC</i>: Default: 01.0</p>  <p>The display is set up with [▲] [▼]. Thereby it switches up to 1 second in increments of 0.1 seconds and up to 10.0 seconds in increments of 1.0. With [P] the selection is confirmed and the device changes into menu level.</p>

Menu level	Parameterisation level
	Rounding of display values, <i>ROUND</i>: Default: 00001  <p>This function is for instable display values, where the display value is changed in increments of 1, 5, 10 or 50. This does not affect the resolution of the optional outputs. With [P] the selection is confirmed and the device changes into menu level.</p>
	Arithmetic, <i>ARITH</i>: Default: NO  <p>Reciprocal Root extraction Square</p> <p>With this function the calculated value, not the measuring value, is shown in the display. With NO, no calculation is deposited. With [P] the selection is confirmed and the device changes into menu level.</p>
	Sliding average determination, <i>AVG</i>: Default: 1.0  <p>Here, the number of the meterings that need to be averaged is preset. The time of averaging results of the product of measuring time SEC and the averaged metering AVG. With the selection of AVG in the menu level DISPL, the result will be shown in the display and evaluated via the alarms.</p>
	Zero point slowdown, <i>ZERO</i>: Default: 00  <p>At the zero point slowdown, a value range around the zero point can be preset, so the display shows a zero. If e.g. a 10 is set, the display would show a zero in the value range from -10 to +10; below continue with -11 and beyond with +11. The maximum adjustable range of value is 99.</p>
	Definite constant value, <i>CONST</i>: Default: 0  <p>The constant value can be evaluated via the alarms or via the analog output, like the current measurand. The decimal place cannot be changed for this value and is taken over by the current measurand. Like this a setpoint generator can be realised via the analog output by this value. Furthermore it can be used for calculating the difference. At this the constant value is subtracted from the current measurand and the difference is evaluated in the alerting or by the analog output. Thus regulations can be displayed quite easily.</p>

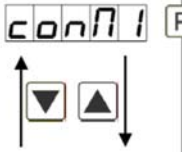
Menu level	Parameterisation level
	<p>Minimum constant value, <i>CON.MI</i>: Default: -9999</p>  <p>The minimum constant value is adjusted from the smallest to the highest digit with the navigation keys [▲] [▼] and confirmed digit per digit with [P]. A minus sign can only be adjusted on the highest digit. After the last digit the display changes back into menu level.</p>
	<p>Maximum constant value, <i>CON.MA</i>: Default: 99999</p>  <p>The maximum constant value is adjusted from the smallest to the highest digit with the navigation keys [▲] [▼] and confirmed digit per digit with [P]. A minus sign can only be adjusted on the highest digit. After the last digit the display changes back into menu level.</p>
	<p>Display, <i>DISPL</i>: Default: <i>ACTUA</i></p>  <p>With this function the current measuring value, Min-/Max value, totaliser value or the process-controlled Hold-value can be allocated to the display. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p>Brightness control, <i>LIGHT</i>: Default: 10</p>  <p>The brightness of the display can be adjusted in 16 levels from 00 = very dark to 15 = very bright via this parameter or alternatively via the navigation keys from the outside. During the start of the device the level that is deposited under this parameter will always be used, even though the brightness has been changed via the navigation keys in the meantime.</p>

Menu level	Parameterisation level
	Display flashing, <i>FLASH</i>: Default: <i>NO</i>
<div>FLASH</div> <div>P</div> <div><div><div>▼</div><div>▲</div></div></div>	<div><div><div></div><div></div><div></div><div></div></div>no</div> <div><div>▲</div><div>▼</div></div> <div>AL-1</div> <div><div>▲</div><div>▼</div></div> <div>AL-2</div> <div><div>▲</div><div>▼</div></div> <div>AL.12</div> <div><div>▲</div><div>▼</div></div> <div>AL-3</div> <div><div>▲</div><div>▼</div></div> <div>AL-4</div> <div><div>▲</div><div>▼</div></div> <div>AL.34</div> <div><div>▲</div><div>▼</div></div> <div>ALAL</div> <div><div>▲</div><div>▼</div></div> <div>P</div>
	A display flashing can be added as additional alarm function either to single or to a combination of off-limit condition. With <i>NO</i> , no flashing is allocated.
	Assignment (deposit) of key functions, <i>TRST</i>: Default: <i>NO</i>
<div>EAST</div> <div>P</div> <div><div><div>▼</div><div>▲</div></div></div>	<div><div><div></div><div></div><div></div><div></div></div>EHTr</div> <div><div>▲</div><div>▼</div></div> <div><div><div></div><div></div><div></div><div></div></div>LI.12</div> <div><div>▲</div><div>▼</div></div> <div><div><div></div><div></div><div></div><div></div></div>LI.34</div> <div><div>▲</div><div>▼</div></div> <div><div><div></div><div></div><div></div><div></div></div>TARA</div> <div><div>▲</div><div>▼</div></div> <div><div><div></div><div></div><div></div><div></div></div>SET.TA</div> <div><div>▲</div><div>▼</div></div> <div><div><div></div><div></div><div></div><div></div></div>TOTAL</div> <div><div>▲</div><div>▼</div></div> <div><div><div></div><div></div><div></div><div></div></div>TOT.RE</div> <div><div>▲</div><div>▼</div></div> <div><div><div></div><div></div><div></div><div></div></div>EHT.RE</div> <div><div>▲</div><div>▼</div></div> <div><div><div></div><div></div><div></div><div></div></div>ACT.UR</div> <div><div>▲</div><div>▼</div></div> <div><div><div></div><div></div><div></div><div></div></div>L11</div> <div><div>▲</div><div>▼</div></div> <div><div><div></div><div></div><div></div><div></div></div>L11-2</div> <div><div>▲</div><div>▼</div></div> <div><div><div></div><div></div><div></div><div></div></div>L11-3</div> <div><div>▲</div><div>▼</div></div> <div><div><div></div><div></div><div></div><div></div></div>L11-4</div> <div><div>▲</div><div>▼</div></div> <div><div><div></div><div></div><div></div><div></div></div>no</div> <div><div>▲</div><div>▼</div></div> <div>P</div>
	For the operation mode, special functions can be deposited on the navigation keys [▲] [▼], in particular this function is made for devices in housing size 48x24 mm which do not have a 4th key ([O] key). If the min-/max-memory is activated with <i>EHTr</i> , all measured min/max-values are safed during operation and can be recalled via the navigation keys. The values get lost by re-start of the device. If the threshold value correction <i>LI.12</i> or <i>LI.34</i> is choosen, the values of the threshold can be changed during operation without disturbing the operating procedure. With <i>TARA</i> the device is tared to zero and safed permanently as offset. The device confirms the correct taring by showing <i>00000</i> in the display. <i>SET.TA</i> switches into the offset value and can be changed via the navigation keys [▲] [▼]. Via <i>TOTAL</i> the current value of the totaliser can be displayed for approx.7 seconds, after this the device changes back on the parameterised display value. If <i>TOT.RE</i> is deposited, the totaliser can be set back by pressing of the navigation keys [▲] [▼], the device acknowledges this with <i>00000</i> in the display. The configuration of <i>EHT.RE</i> deletes the min/max-memory. Under <i>ACTUR</i> the measurand is shown for approx. 7 seconds, after this the display returns to the parameterised display value. If <i>ABS.UR</i> (absolute value) was selected, the display shows the value that has been measured since voltage connection, without consideration of a previous taring. Via selection <i>L1.1</i> , <i>L1.1-2</i> , <i>L1.1-3</i> , <i>L1.1-4</i> threshold values can be adressred via the navigation keys; they can be changed digit per digit or taken over by pushing the [P]-key. The adjustment is taken over directly, an excisting limit value monitoring and the current measurement will not be influenced by this. If <i>NO</i> is selected, the navigation keys are without any function in the operation mode.

A display flashing can be added as additional alarm function either to single or to a combination of off-limit condition. With *no*, no flashing is allocated.

Menu level	Parameterisation level
<div><div>diGIN</div><div>P</div><div><div>▼</div><div>▲</div></div></div>	<div><div>Special function digital input, DIG.IN:</div><div>Default: NO</div><div><div>TARA</div><div>SET.TA</div><div>TOTAL</div><div>TOT.RE</div><div>EHT.RE</div><div>ACTUA</div><div>HOLD</div><div>AUG</div><div>SE.CAL</div><div>CONST</div><div>AL-1 ...</div><div>AL-4</div><div>no</div><div>P</div></div></div> <div><p>For the operation mode, special functions can be deposited on the digital input. This function is actuated by pushing the key. With TARA the device is tared to zero and safed permanently as offset. The device confirms the correct taring by showing 00000 in the display. SET.TA switches into the offset value and can be changed via the navigation keys [▲] [▼]. Via TOTAL the current value of the totaliser can be displayed for approx.7 seconds, after this the device changes back on the parameterised display value. If TOT.RE is deposited, the totaliser can be set back by pressing of the navigation keys [▲] [▼], the device acknowledges this with 00000 in the display. The configuration of EHT.RE deletes the min/max-memory. If HOLD has been selected, the moment can be hold constant by triggering the digital input, and is updated by releasing the key. Advice: HOLD can only be activated, if HOLD was selected under parameter DISPL. Under ACTUA the measurand is shown for approx. 7 seconds, after this the display returns to the parameterised display value. The same applies for AVG, here the sliding average value will be displayed. A sensor calibration is done by triggering of the digital input via SE.CAL, the flow diagram is shown in <i>Chapter 8</i>. The constant value CONST can be recalled via the digital input, or changed digit per digit. At AL-1...AL-4 there can be set an output and therewith e.g. a setpoint adjustment can be done. If NO is selected, the [O]-key is without any function in the operation mode.</p></div>
<div><div>RET</div><div><div>▼</div><div>▲</div></div></div>	<div><div>Back to menu group level, RET:</div><div>With [P] the selection is confirmed and the device changes into menu group level „- FCT -“.</div></div>


9.4.3 Safety parameters

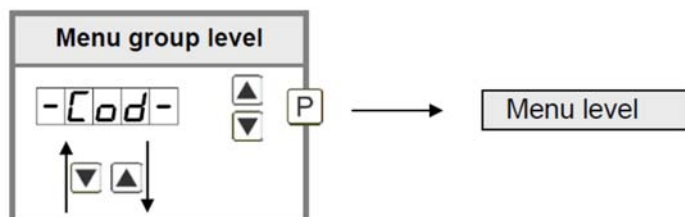

Menu level	Parameterisation level
	User code <i>U.CODE</i>: Default: 0000 <p>Via this code reduced sets of parameters can be set free. A change of the <i>U.CODE</i> can be done via the correct input of the <i>R.CODE</i> (master code).</p>
	Master code, <i>R.CODE</i>: Default: 1234 <p>By entering <i>R.CODE</i> the device will be unlocked and all parameters are released.</p>
	Release/lock analog output parameter, <i>OUT.LE</i>: Default: <i>ALL</i> <p>Analog output parameter can be locked or released for the user:</p> <ul style="list-style-type: none"> - At <i>EN-OF</i> the initial or final value can be changed in operation mode. - At <i>OUT.EO</i> the output signal can be changed from e.g. 0-20 mA to 4-20 mA or 0-10 VDC. - At <i>ALL</i> analog output parameters are released. - At <i>NO</i> all analog output parameters are locked.
	Release/lock alarm parameters, <i>AL.LEU</i>: Default: <i>ALL</i> <p>This parameter describes the user release/user lock of the alarm.</p> <ul style="list-style-type: none"> - <i>LIMIT</i>, here only the range of value of the threshold values 1-4 can be changed. - <i>AL-RL</i>, here the range of value and the alarm trigger can be changed. - <i>ALL</i>, all alarm parameters are released. - <i>NO</i>, all alarm parameters are locked.


Menu level	Parameterisation level
	<p>Back to menu group level, <i>RET</i>:</p> <p>With [P] the selection is confirmed and the device changes into menu group level „- <i>cod</i> -“.</p>

9.4.4 Serial parameters

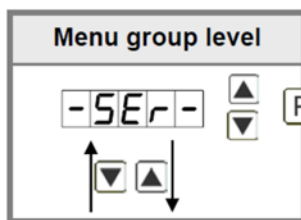

Menu level	Parameterisation level
	<p>Device address, <i>ADDR</i>: Default: <i>001</i></p> <p></p> <p>The device address is adjusted from the smallest to the largest digit with the navigation keys [▲] [▼] and confirmed digit per digit with [P]. A device address up to max. 250 is available. Interface data: Baudrate 9600 bit/s, 8 databyte, 1 stopbit, no parity (8n1).</p>
	<p>ModBus operating modes, <i>B.MODE</i>: Default: <i>ASCII</i></p> <p></p> <p>There are two different types of operating modes: <i>ASCII</i> and <i>RTU</i>. Modbus transfers no binary cycle, but the ASCII-Code. Thus it is directly readable, however the data throughput is smaller in comparison to the RTU. Modbus RTU (RTU = Remote Terminal Unit) transfers the data in binary-coded. This leads to a good data throughput, even though the data cannot be evaluated directly, as they first need to be transferred into a readable format.</p>
	<p>Timeout, <i>TOUT</i>: Default: <i>000</i></p> <p></p> <p>The monitoring of the data transfer is parameterised in seconds up to max. 100 seconds; there is no monitoring with an input of <i>000</i>. The timeout is adjusted from the smallest to the largest digit with the navigation keys [▲] [▼] and confirmed digit per digit with [P]. After the last digit the device changes back into menu level.</p>
	<p>Back to menu group level, <i>RET</i>:</p> <p>With [P] the selection is confirmed and the device changes into menu group level „- <i>SER</i> -“.</p>


9.4.5 Analogue output parameters

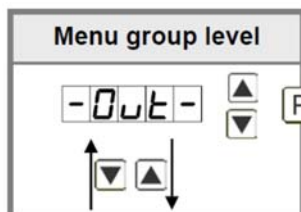



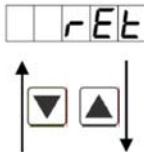
Menu level	Parameterisation level
	<p>Selection reference of analog output, <i>OUTPT</i>: Default: <i>ACTUA</i></p> <p> </p> <p>The analog output signal can refer to different functions, in detail these are the current measurand, the min-value, the max-value, the totaliser-/sum function, the constant value or the difference between current measurand and constant value. If <i>HOLD</i> is selected, the signal of the analog output will be kept. It can be continued processing after a deactivation of <i>HOLD</i>. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p>Selection analog output, <i>OUT.RA</i>: Default: <i>4-20</i></p> <p> </p> <p>Three output signals are available 0-10 VDC, 0-20 mA and 4-20 mA. Select the desired signal with this function.</p>
	<p>Setting the final value of the analog output, <i>OUT.EN</i>: Default: <i>10000</i></p> <p> </p> <p>The final value is adjusted from the smallest to the highest digit with [▲] [▼] and confirmed digit per digit with [P]. A minus sign can only be parameterised on the highest digit. After the last digit the device changes back into menu level.</p>
	<p>Setting the initial value of the analog output, <i>OUT.OF</i>: Default: <i>00000</i></p> <p> </p> <p>The initial value is adjusted from the smallest to the highest digit with [▲] [▼] and confirmed digit per digit with [P]. A minus sign can only be parameterised on the highest digit. After the last digit the device changes back into menu level.</p>

Menu level	Parameterisation level
<div><div>O.FLOU</div><div>P</div><div><div>▼▲</div></div></div>	<div><div>Overflow behaviour, O.FLOU:</div><div>Default: EDGE</div><div><div>EDGE</div><div>▲▼</div><div>LoEnd</div><div>▲▼</div><div>LoOFF</div><div>▲▼</div><div>LoMin</div><div>▲▼</div><div>LoMax</div><div>▲▼</div><div>P</div></div></div> <div><div>To recognise and evaluate faulty signals, e.g. by a controller, the overflow behaviour of the analog output can be defined. As overflow can be seen either <i>EDGE</i>, that means the analog output runs on the set limits e.g. 4 and 20 mA, or <i>Lo.OFF</i> (input value smaller than initial value, analog output switches on e.g. 4 mA), <i>Lo.END</i> (higher than final value, analog output switches on e.g. 20 mA). If <i>Lo.MIN</i> or <i>Lo.MAX</i> is set, the analog output switches on the smallest or highest possible binary value. This means that values of e.g. 0 mA, 0 VDC or values higher than 20 mA or 10 VDC can be reached. With [P] the selection is confirmed and the device changes into menu level.</div></div>
<div><div><div>RET</div></div><div><div>▼▲</div></div></div>	<div><div>Back to menu group level, RET:</div><div>With [P] the selection is confirmed and the device changes into menu group level „- OUT -“.</div></div>


9.4.6 Relay functions


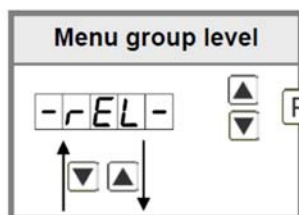


Menu level	Parameterisation level												
<div><div>REL-1</div><div>P</div><div><div>AL-1</div>....<div>AL-4</div><div>AL-n1</div>....<div>AL-n4</div><div>LOGIC</div><div>OFF</div><div>On</div><div>CAL</div><div>CALOF</div><div>CALEn</div><div>P</div></div></div> <div><div>↑</div><div>↓</div></div>	<div>The same applies for relay 2</div> <div>Each setpoint (optional) can be linked up via 4 alarms (by default). This can either be inserted at activated alarms <i>AL1/4</i> or de-activated alarms <i>ALn1/4</i>. If <i>LOGIC</i> is selected, logical links are available in the menu level <i>LOG-1</i> and <i>COM-1</i>. One can only get to these two menu levels via <i>LOGIC</i>, at all other selected functions, these two parameters are overleaped. Via <i>ON/OFF</i> the setpoints can be activated/de-activated, in this case the output and the setpoint display are set/not set on the front of the device. The parameters <i>CAL</i>, <i>CALOF</i> and <i>CALEn</i> can only be used in accordance with the semi-automatic calibration (<i>Chapter 9. Sensor alignment</i>). At <i>CAL</i> the relay switches during sensor calibration, at <i>CALOF</i> during offset calibration and at <i>CALEn</i> during the calibration of the final value. With [P] the selection is confirmed and the device changes into menu level.</div>												
<div><div>LOG-1</div><div>P</div><div><div>or</div><div>nor</div><div>And</div><div>nAnd</div><div>P</div></div></div> <div><div>↑</div><div>↓</div></div>	<div>Logic relay 1, LOG-1 Default: OR</div> <div>Here, the switching behaviour of the relay is defined via a logic link, the following schema describes these functions with inclusion of <i>AL-1</i> and <i>AL-2</i>. This parameter can only be selected if <i>LOGIC</i> was selected under <i>REL-1</i>.</div> <table><tr><td><div>or</div></td><td>$A1 \vee A2$</td><td>As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.</td></tr><tr><td><div>nor</div></td><td>$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$</td><td>The relay operates only, if no selected alarm is active. Equates to quiescent current principle.</td></tr><tr><td><div>And</div></td><td>$A1 \wedge A2$</td><td>The relay operates only, if all selected alarms are active.</td></tr><tr><td><div>nAnd</div></td><td>$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$</td><td>As soon as a selected alarm is not activated, the relay operates.</td></tr></table> <div>With [P] the selection is confirmed and the device changes into menu level.</div>	<div>or</div>	$A1 \vee A2$	As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.	<div>nor</div>	$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$	The relay operates only, if no selected alarm is active. Equates to quiescent current principle.	<div>And</div>	$A1 \wedge A2$	The relay operates only, if all selected alarms are active.	<div>nAnd</div>	$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$	As soon as a selected alarm is not activated, the relay operates.
<div>or</div>	$A1 \vee A2$	As soon as a selected alarm is activated, the relay operates. Equates to operating current principle.											
<div>nor</div>	$\overline{A1 \vee A2} = \overline{A1} \wedge \overline{A2}$	The relay operates only, if no selected alarm is active. Equates to quiescent current principle.											
<div>And</div>	$A1 \wedge A2$	The relay operates only, if all selected alarms are active.											
<div>nAnd</div>	$\overline{A1 \wedge A2} = \overline{A1} \vee \overline{A2}$	As soon as a selected alarm is not activated, the relay operates.											

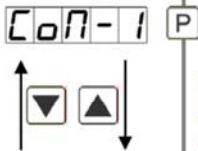Menu level	Parameterisation level
	Alarms for relay 1, CON-1: Default: <i>RI</i>  <p>The allocation of the alarms to relay 1 happens via this parameter, one alarm or a group of alarms can be chosen. With [P] the selection is confirmed and the device changes into menu level.</p>
	Back to menu group level, rEt: <p>With [P] the selection is confirmed and the device changes into menu group level „- REL -“.</p>

9.4.7 Alarm parameters

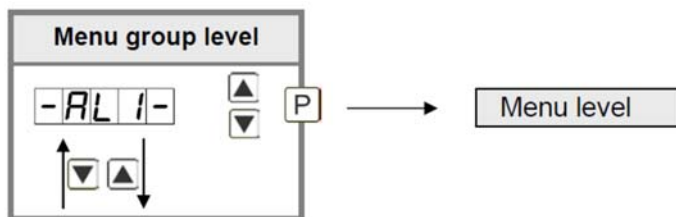


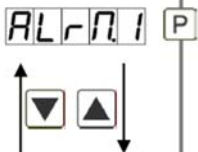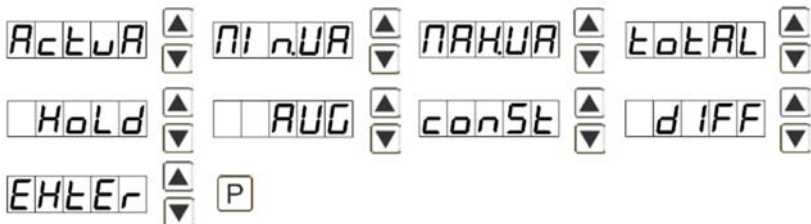Menu level	Parameterisation level
	Dependency alarm1, ALRM.1: Default: <i>ACTUA</i>  <p>The dependency of alarm1 can be related to special functions, in detail these are the current measurand, the MIN-value, the MAX-value, the totaliser value/sum value, the sliding average value, the constant value or the difference between the current measurand and the constant value. If <i>HOLD</i> is selected the alarm is hold and processed just after deactivation of <i>HOLD</i>. <i>EHTER</i> causes the dependency either by pressing the [O]-key on the front of the housing or by an external signal via the digital input. With [P] the selection is confirmed and the device changes into menu level.</p> <p>Example: By using the maximum value <i>ALARM.1 = MAX.VA</i> in combination with a threshold monitoring <i>FU-1 = HIGH</i>, an alarm confirmation can be realised. Use the navigationkeys, the fourth key or the digital input for confirmation.</p>


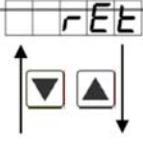
Menu level	Parameterisation level
	Threshold values / Limit values, LI-1: Default: 2000 <div style="display: flex; align-items: center;"> [LI-1] [P] <div style="margin-left: 20px;"> [0] [P] [0] [P] [0] [P] [0] [P] [0] [▲▼] [P] </div> </div> <p>The limit value defines the threshold, that activates/deactivates an alarm.</p>
	Hysteresis for threshold values, HY-1: Default: 00000 <div style="display: flex; align-items: center;"> [HY-1] [P] <div style="margin-left: 20px;"> [0] [P] [0] [P] [0] [P] [0] [P] [0] [▲▼] [P] </div> </div> <p>The delayed reaction of the alarm is the difference to the threshold value, which is defined by the hysteresis.</p>
	Function for threshold value undercut/exceedance, FU-1: Default: HIGH <div style="display: flex; align-items: center;"> [FU-1] [P] <div style="margin-left: 20px;"> [HIGH] [▲▼] [LOW] [▲▼] [P] </div> </div> <p>A limit value undercut is selected with LOW (for LOW = lower limit value), a limit value exceedance with HIGH (for HIGH = higher limit value). If e.g. limit value 1 is on a threshold level of 100 and allocated with function HIGH, an alarm is activated by reaching of the threshold level. If the threshold value was allocated to LOW, an alarm will be activated by undercutting the threshold value, as long as the hysteresis is zero.</p>
	Switching-on delay, TON-1: Default: 000 <div style="display: flex; align-items: center;"> [TON-1] [P] <div style="margin-left: 20px;"> [0] [P] [0] [P] [0] [▲▼] [P] </div> </div> <p>For limit value 1 one can preset a delayed switching-on of 0-100 seconds.</p>
	Switching-off delay, TOF-1: Default: 000 <div style="display: flex; align-items: center;"> [TOF-1] [P] <div style="margin-left: 20px;"> [0] [P] [0] [P] [0] [▲▼] [P] </div> </div> <p>For limit value 1 one can preset a delayed switching-off of 0-100 seconds.</p>
	Back to menu group level, RET: <div style="display: flex; align-items: center;"> [RET] </div> <p>With [P] the selection is confirmed and the device changes into menu group level „- RL1 -“.</p>

The same applies for $AL2$ to $AL8$.


9.4.8 Totalizer (volume metering)

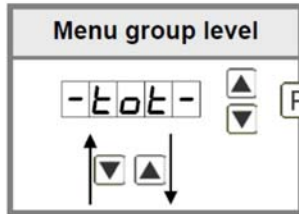

Menu level	Parameterisation level
	<p>State of totaliser, <i>TOTAL</i>: Default: <i>OFF</i></p> <p><i>t o t a l</i> P <i>OFF</i> <i>STEAD</i> <i>TEMP</i> P</p> <p>The totaliser realizes measurements on a time base of e.g. l/h, at this the scaled input signal is integrated by a time and steadily (select <i>STEAD</i>) or temporarily (select <i>TEMP</i>) saved. Select the constant storage for consumption measurements and the quick storage for frequently filling processes. During the constant storage <i>STEAD</i> the current sum value is saved at each totaliser reset. Furthermore it is saved every 30 minutes in the not-quick storage of the device. If <i>OFF</i> is selected, the function is deactivated. With [P] the selection is confirmed and the device changes into menu level.</p>
	<p>Time base, <i>T.BASE</i>: Default: <i>SEC</i></p> <p><i>t . b a s e</i> P <i>SEC</i> <i>min</i> <i>hour</i> P</p> <p>Under this parameter the time base of the measurement can be preset in seconds, minutes or hours.</p>
	<p>Totaliser factor, <i>FACTO</i>: Default: <i>1E0</i></p> <p><i>F A C T O</i> P <i>1E0</i> ... <i>1E6</i> P</p> <p>At this the factor (1E0...1E6) respectively the divisor for the internal calculation of the measuring value is assigned.</p>
	<p>Setting up the decimal point for the totaliser, <i>TOT.DT</i>: Default: <i>0</i></p> <p><i>t o t . d t</i> P <i>0</i> <i>00</i> <i>000</i> <i>0000</i> <i>00000</i> P</p> <p>The decimal point of the device can be adjusted with the navigation keys [▲] [▼]. With [P] the selection is confirmed and the device changes into menu level.</p>

Menu level	Parameterisation level
	<p>Totaliser reset, <i>TOT.RE</i>: Default: 00000</p> <p>The reset value is adjusted from the smallest to the highest digit with the navigation keys [▲] [▼] and digit per digit confirmed with [P]. After the last digit, the display switches back to the menu level. The activator for the reset is parameter driven via the 4th key or via the optional digital input.</p>
	<p>Back to menu group level, <i>RET</i>:</p> <p>With [P] the selection is confirmed and the device changes into menu group level „- TOT -“.</p>

Programming interlock RUN
Description see page 14, menu level RUN

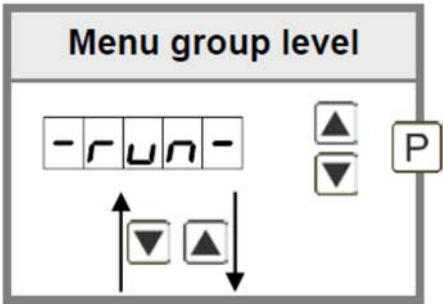

10. Reset to default values

To return the unit to a **defined basic state**, a reset can be carried out to the default values.

The following procedure should be used:

- Switch off the power supply.
- Press button [P].
- Switch on voltage supply and press [P]-button until “- - - -” is shown in the display.


With reset, the default values of the program table are loaded and used for subsequent operation. This sets the unit back to the state in which it was supplied.

CAUTION! All application-related data are lost!

11. Alarms / Relays


This device has 8 virtual alarms that can monitor one limit value in regard of an undercut or exceedance. Each alarm can be allocated to an optional relay output S1-S2; furthermore, alarms can be controlled by events like e.g. Hold or min-/max. value.

Function principle of alarms / relays	
Alarm / Relay x	deactivated, instantaneous value, min-/max-value, hold-value, totaliser value, sliding average value, constant value, difference between instantaneous value and constant value or an activation via the digital input
Switching threshold	Threshold / limit value of the change-over
Hysteresis	Broadness of the window between the switching thresholds
Working principle	Operating current / quiescent current

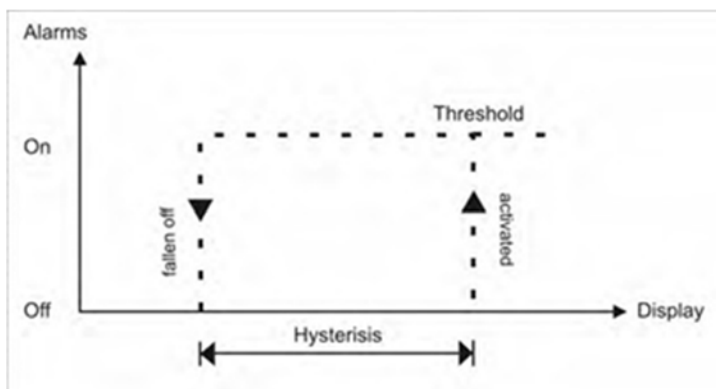


Operating current

By operating current the alarm S1-S2 is off below the threshold and on on reaching the threshold.

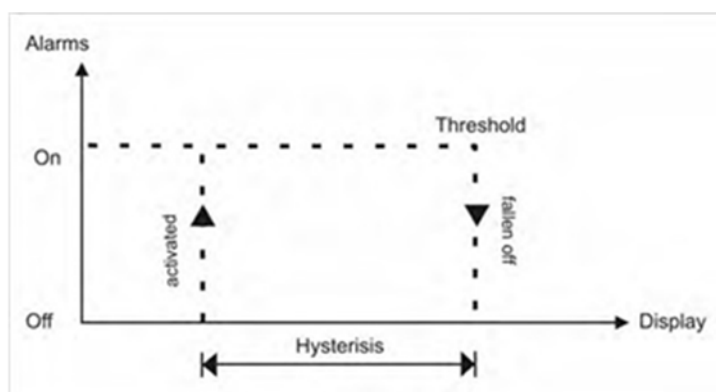

Quiescent current

By quiescent current the alarm S1-S2 is on below the threshold and switched off on reaching the threshold.

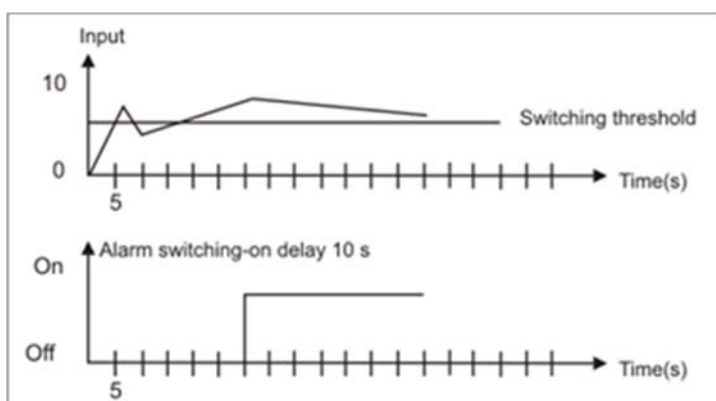

Switching-on delay

The switching-on delay is activated via an alarm and e.g. switched 10 seconds after reaching the switching threshold. A short-term exceedance of the switching value does not cause an alarm, respectively does not cause a switching operation of the relay. The switching-off delay operates in the same way, keeps the alarm / the relay switched longer for the parameterized time.

12. Interfaces

Connection RS232


Digital meter DAG-M3V

PC - 9-pole Sub-D-plug



Connection RS485

Digital meter DAG-M3V

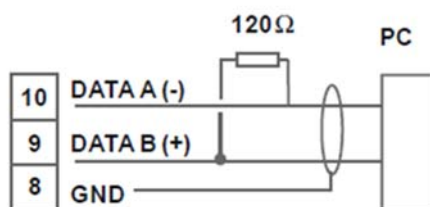

The interface **RS485** is connected via a screened data line with twisted wires (Twisted-Pair). On each end of the bus segment a termination of the bus lines needs to be connected. This is necessary to ensure a secure data transfer to the bus. For this a resistance (120 Ohm) is interposed between the lines Data B (+) and Data A (-).

14. Technical Information

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

15. Order Codes

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

16. Dimensions

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

17. Safety advices

Please read the following safety advices and the assembly *chapter 6* before installation and keep it for future reference.

Proper use

The **DAG-device** is designed for the evaluation and display of sensor signals.



DANGER! Careless use or improper operation can result in personal injury and / or damage to the equipment.

Control of the device

The panel meters are checked before dispatch and sent out in perfect condition. Should there be any visible damage, we recommend close examination of the packaging. Please inform the supplier immediately of any damage.



Installation

The **DAG-device** must be installed by a suitable **qualified specialist** (e.g. with a qualification in industrial electronics).

Notes on installation

- There must be no magnetic or electric fields in the vicinity of the device, e.g. due to transformers, mobile phones or electrostatic discharge.
- The **fuse rating** of the supply should not exceed a value of **0.5 A N.B fuse**.
- Do not install **inductive consumers** (relays, solenoid valves etc.) near the device and **suppress** any interference with the aid of RC spark extinguishing combinations or free-wheeling diodes.
- Keep input, output and supply lines separate from one another and do not lay them parallel with each other. Position “go” and “return” lines next to one another. Where possible use twisted pair. So, you receive best measuring results.
- Screen off and twist sensor lines. Do not lay current-carrying lines in the vicinity. Connect the **screening on one side** on a suitable potential equalizer (normally signal ground).
- The device is not suitable for installation in areas where there is a risk of explosion.
- Any electrical connection deviating from the connection diagram can endanger human life and / or destroy the equipment.
- The terminal area of the device is part of the service. Here electrostatic discharge needs to be avoided. Attention! High voltages can cause dangerous body currents.
- Galvanic insulated potentials within one complex need to be placed on an appropriate point (normally earth or machines ground). So, a lower disturbance sensibility against impacted energy can be reached and dangerous potentials, that can occur on long lines or due to faulty wiring, can be avoided.

18. Error elimination

	Error description	Measures
1.	<p>The unit permanently indicates overflow.</p> 	<ul style="list-style-type: none"> • The input has a very high measurement, check the measuring circuit. • With a selected input with a low voltage signal, it is only connected on one side or the input is open. • Not all of the activated setpoints are parameterised. Check if the relevant parameters are adjusted correctly.
2.	<p>The unit permanently shows underflow.</p> 	<ul style="list-style-type: none"> • The input has a very low measurement, check the measuring circuit . • With a selected input with a low voltage signal, it is only connected on one side or the input is open. • Not all of the activated setpoints are parameterised. Check if the relevant parameters are adjusted correctly.
3.	<p>The word "HELP" lights up in the 7-segment display.</p>	<ul style="list-style-type: none"> • The unit has found an error in the configuration memory. Perform a reset on the default values and re-configure the unit according to your application.
4.	<p>Program numbers for parameterising of the input are not accessible.</p>	<ul style="list-style-type: none"> • Programming lock is activated • Enter correct code
5.	<p>"ERR1" lights up in the 7-segment display</p>	<ul style="list-style-type: none"> • Please contact the manufacturer if errors of this kind occur.
6.	<p>The device does not react as expected.</p>	<ul style="list-style-type: none"> • If you are not sure that the device has been parameterised before, then follow the steps as written in <i>chapter 6</i> and set it back to its delivery status.


19. Disposal

Note!

- Avoid environmental damage caused by media-contaminated parts
- Dispose of the device and packaging in an environmentally friendly manner
- Comply with applicable national and international disposal regulations and environmental regulations.


Batteries

Batteries containing pollutants are marked with a sign consisting of a crossed-out garbage can and the chemical symbol (Cd, Hg, Li or Pb) of the heavy metal that is decisive for the classification as containing pollutants:

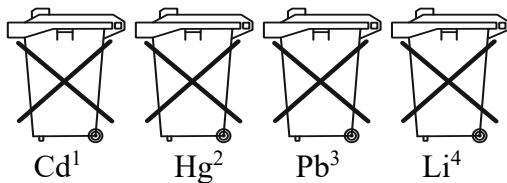

1. „Cd" stands for cadmium
2. „Hg" stands for mercury
3. „Pb" stands for lead
4. „Li" stands for lithium

Electrical and electronic equipment

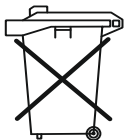

20. EU Declaration of Conformance

We, KOBOLD Messring GmbH, Hofheim-Ts, Germany, declare under our sole responsibility that the product:

Digital Indicating Unit model: DAG-M3V

to which this declaration relates is in conformity with the standards noted below:

EN 61010-1:2010+A1:2019+A1:2019/AC:2019

Safety requirements for electrical equipment for measurement, control and laboratory use - Part 1: General requirements

EN 61326-1:2013

Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 1: General requirements

EN IEC 63000:2018 Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Also, the following EC guidelines are fulfilled:

2014/30/EU	EMC Directive
2014/35/EU	Low Voltage Directive
2011/65/EU	RoHS (category 9)
2015/863/EU	Delegated Directive (RoHS III)

Hofheim, 13 March 2023



H. Volz
General Manager



M. Wenzel
Proxy Holder

21. UK Declaration of Conformity

We, KOBOLD Messring GmbH, Hofheim-Ts, Germany, declare under our sole responsibility that the product:

Digital Indicating Unit model: DAG-M3V

to which this declaration relates is in conformity with the standards noted below:

BS EN 61010-1:2010+A1:2019

Safety requirements for electrical equipment for measurement, control, and laboratory use. General requirements

BS EN 61326-1:2013

Electrical equipment for measurement, control and laboratory use. EMC requirements. General requirements

BS EN IEC 63000:2018

Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.

Also, the following UK guidelines are fulfilled:

S.I. 2016/1091

Electromagnetic Compatibility Regulations 2016

S.I. 2016/1101

Electrical Equipment (Safety) Regulations 2016

S.I. 2012/3032

The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

Hofheim, 05 June 2023

H. Volz
General Manager

M. Wenzel
Proxy Holder

22. Appendix MODBUS Device Interface

MODBUS Device Interface for M-Line

interface parameters: 1 Start-, 8 Daten-, 1 Stopbit, no parity, 9600 baud

Compatibility – The interface is compatible with the Modicon Modbus protocol. That is, all the registers have a size of 16-bits. Larger data types are then occupied by several registers in a row. It also supports a non-Modicon compatible mode. In this mode, each data type is only one register corresponding to the data type size (minimum is always 16-bits).

Info: Modicon - company that has produced the first PLC, now Schneider Electric

Note: Access to data types must prove the plurality of registers always be in a read-write and must not be distributed to several write accesses!

Device address: Device address as a value between 1 and 247 can be used. To address 0 multiple devices can simultaneously achieve (broadcast), if the corresponding function is supported (no reception is possible, for example device reset).

Transfer Mode: The devices support the RTU mode (binary data, default) and ASCII mode (alphanumeric characters - hexadecimal). The RTU mode is faster because fewer bytes but must be trans-mitted this critical time. The ASCII mode is more suitable for communication with PC based systems, since they often can not meet the time-critical conditions for the RTU mode.

Note: The device configuration with the PM tool is possible only in ASCII mode.

Supported data types

Name	Number range	Size	Register count Modicon mode	Register count not Modicon mode
INT08	-128..127	2 Byte	1	1
UINT08	0..255	2 Byte	1	1
INT16	-32768..32767	2 Byte	1	1
UINT16	0..65535	2 Byte	1	1
INT32	-2147843648.. 2147843647	4 Byte	2	1
UIN32	0..4294967295	4 Byte	2	1
INT64	-9223372036854775808.. 9223372036854775807	8 Byte	4	1
FLOAT	-/+3.402823466e-/+38	4 Byte	2	1

Adress range

Range hex	dec	Comment
0x0000 .. 0x3FFF	0 .. 16383	Reserved (not Modicon mode)
0x4000 .. 0x4FFF	16383 .. 20497	16-Bit Integer without decimal place
0x5000 .. 0x5FFF	20480 .. 24575	Reserved
0x6000 .. 0x6FFF	24576 .. 28671	32-Bit Integer without decimal place
0x7000 .. 0x7FFF	28672 .. 32767	32-Bit Float
0x8000 .. 0xFFFF	32768 .. 65535	Reserved

Supported function codes

Code (hex)	Function	Comment
0x03	READ HOLDING REGISTERS	For example measuring values or alarms
0x04	READ INPUT REGISTER	Same function like 0x03
0x08	DIAGNOSTIC	Diagnose informations
0x10	WRITE MULTIPLE REGISTERS	For example measuring values or alarms

Register description

Adress range 0x4000 .. 0x4FFF - 16 bit Register					
Name	Index	Access mode	Min/Max- value data type	Comment	
Measuring channel	0x4400	r/w	0..65535 UNIT16	User defined identification	
Alarm status	0x4500	r/w	0..65535 UNIT16	Bit	Funktion
				0	Alarm 1 active
				1	Alarm 2 active
				2	Alarm 3 active
				3	Alarm 4 active
				4	Alarm 5 active
				5	Alarm 6 active
				6	Alarm 7 active
				7	Alarm 8 active
				8..15	Reserved
Relay status	0x4600	r/-	0..65535 UNIT16	Bit	Funktion
				0	Relay 1 active
				1	Relay 2 active
				2	Relay 3 active
				3	Relay 4 active
				4	Relay 5 active
				5	Relay 6 active
				6	Relay 7 active
				7	Relay 8 active
				8..15	reserviert
Display brightness	0x4700	r/w	0..15	0 = dark (lowest level) 15 = bright (highest level)	

Note: 4-digit display is the minimum value and the maximum value -2000 10,000.

The display area is limited to 4-digit displays from -1999 to 9999 and on 5-digit -19999 to 99999. A measured value of -20000 or 100000 (or -2000 to 10000 or 4-digit display) signalisert an underflow or overflow of the measuring range. The same is also valid if on the last digit of the display, a symbol of a unit of measurement is displayed.

Adress range 0x6000 .. 0x6FFF - 32 bit Register				
Name	Index	Access mode	Min/Max- value data type	Comment
Time stamp Low-Word	0x6000	r/w	0..35999 UINT32	10ms Stepps. Reset after 1 hour.
Time stamp High-Word	0x6001			
Fieldvalue Low-Word	0x6002	r/-	0..4294967295 UINT32	Field value of ADC
Fieldvalue High-Word	0x6003			
Prozessvalue Low-Word	0x6004	r/w	-20000..100000 INT32	Process value
Prozessvalue High-Word	0x6005			
Prozessvalue-Min Low-Word	0x6006	r/w	-20000..100000 INT32	Minimum value
Prozessvalue-Min High-Word	0x6007			
Prozessvalue-Max Low-Word	0x6008	r/w	-20000..100000 INT32	Maximum value
Prozessvalue-Max High-Word	0x6009			
Prozessvalue-Tot Low-Word	0x600A	r/w	-20000..100000 INT32	Totalizer (displayed value)
Prozessvalue-Tot High-Word	0x600B			
Prozessvalue-Hld Low-Word	0x600C	r/-	-20000..100000 INT32	Hold value
Prozessvalue-Hld High-Word	0x600D			
Prozessvalue-Avg Low-Word	0x600E	r/-	-20000..100000 INT32	Average value (averaging function)
Prozessvalue-Avg High-Word	0x600F			
Prozessvalue-Abs Low-Word	0x6010	r/-	-20000..100000 INT32	Absolute value
Prozessvalue-Abs High-Word	0x6011			
Prozessvalue-Nom Low-Word	0x6012	r/w	-20000..100000 INT32	Nominal value, Set value
Prozessvalue-Nom High-Word	0x6013			
Prozessvalue-Diff Low-Word	0x6014	r/-	-20000..100000 INT32	Difference value
Prozessvalue-Diff High-Word	0x6015			
Limit alarm 1 Low-Word	0x6500	r/w	-19999..99999 INT32	
Limit alarm 1 High-Word	0x6501			
Limit alarm 2 Low-Word	0x6502	r/w	-19999..99999 INT32	
Limit alarm 2 High-Word	0x6503			
Limit alarm 3 Low-Word	0x6504	r/w	-19999..99999 INT32	
Limit alarm 3 High-Word	0x6505			
Limit alarm 4 Low-Word	0x6506	r/w	-19999..99999 INT32	
Limit alarm 4 High-Word	0x6507			
Limit alarm 5 Low-Word	0x6508	r/w	-19999..99999 INT32	
Limit alarm 5 High-Word	0x6509			
Limit alarm 6 Low-Word	0x650A	r/w	-19999..99999 INT32	
Limit alarm 6 High-Word	0x650B			
Limit alarm 7 Low-Word	0x650C	r/w	-19999..99999 INT32	
Limit alarm 7 High-Word	0x650D			
Limit alarm 8 Low-Word	0x650E	r/w	-19999..99999	

Grenzwert Alarm 8 High-Word	0x650F		INT32	
Adressbereich 0x7000 .. 0x7FFF - 32 bit float Register				
Name	Index	Zugriffs- modus	Min/Max-Wert Datentyp	Bemerkung
Zeitstempel Low-Word	0x7000	r/-	0..35999 FLOAT	10ms Stepps. Reset after 1 hour.
Zeitstempel High-Word	0x7001			
Prozessvalue Low-Word	0x7004	r/-	-20000..100000 FLOAT	Field value of ADC
Prozessvalue High-Word	0x7005			
Prozessvalue-Min Low-Word	0x7006	r/-	-20000..100000 FLOAT	Process value
Prozessvalue-Min High-Word	0x7007			
Prozessvalue-Max Low-Word	0x7008	r/-	-20000..100000 FLOAT	Minimum value
Prozessvalue-Max High-Word	0x7009			
Prozessvalue-Tot Low-Word	0x700A	r/-	-20000..100000 FLOAT	Maximum value
Prozessvalue-Tot High-Word	0x700B			
Prozessvalue-Hld Low-Word	0x700C	r/-	-20000..100000 FLOAT	Totalizer (displayed value)
Prozessvalue-Hld High-Word	0x700D			
Prozessvalue-Avg Low-Word	0x700E	r/-	-20000..100000 FLOAT	Hold value
Prozessvalue-Avg High-Word	0x700F			
Prozessvalue-Abs Low-Word	0x7010	r/-	-20000..100000 FLOAT	Average value
Prozessvalue-Abs High-Word	0x7011			
Prozessvalue-Nom Low-Word	0x6012	r/-	-20000..100000 FLOAT	Absolute value
Prozessvalue-Nom High-Word	0x6013			
Prozessvalue-Diff Low-Word	0x6014	r/-	-20000..100000 FLOAT	Nominal value, Set value
Prozessvalue-Diff High-Word	0x6015			

Protocol

Standard form of message:

MODBUS-RTU

Device address	Function	Data	CRC
1 Byte	1Byte	n Bytes	2 Bytes

MODBUS-ASCII

Start	Device address	Function	Data	LRC-Wert	Ende
':'	2 Zeichen	2 Zeichen	n x 2 Zeichen	2 Zeichen	'\r\n'

Note: In ASCII mode, we presented one byte with two characters in hexadecimal code ('00 .. FF').

Message Format:

Function 0x03 (Register read) - Requirements

Adresse	Funktion	Daten				Check sum	
		Start address		Count of registers		Low-Byte	High-Byte
		High-Byte	Low-Byte	High-Byte	Low-Byte		
0xnn	0x03	0xnn	0xnn	0xnn	0xnn	0xnn	0xnn

Function 0x03 (Register read) - Reply

Adresse	Funktion	Daten						Check sum	
		Count of bytes nn = count register x 2	Register n + 0		...	Register n + X		Low-Byte	High-Byte
			High-Byte	Low-Byte		High-Byte	Low-Byte		
0xnn	0x03	0xnn	0xnn	0xnn	...	0xnn	0xnn	0xnn	0xnn

Function 0x10 (Register write) - Requirements

Adresse	Funktion	Data										Check sum	
		Start address		Count of registers		Anzahl Bytes = Anzahl Register x 2	Register n + 0		...	Register n + X		Low-Byte	High-Byte
		High-Byte	Low-Byte	High-Byte	Low-Byte		High-Byte	Low-Byte		High-Byte	Low-Byte		
0xnn	0x10	0xnn	0xnn	0xnn	0xnn	0xnn	0xnn	0xnn	...	0xnn	0xnn	0xnn	0xnn

Function 0x10 (Register write) - Reply

Adresse	Funktion	Data				Check sum	
		Start address		Count of registers		Low-Byte	High-Byte
		High-Byte	Low-Byte	High-Byte	Low-Byte		
0xnn	0x10	0xnn	0xnn	0xnn	0xnn	0xnn	0xnn

Examples

Read a 32-Bit value

MODBUS Device address 1, Index 0x6004, Register count 2, Reply value 93350 (0x00016CA6)

Telegram: MODBUS-RTU

Anforderung (Request)

Adresse	Funktion	Data				Check sum	
		Start address		Count of registers			
		High-Byte	Low-Byte	High-Byte	Low-Byte	Low-Byte	High-Byte
0x01	0x03	0x60	0x04	0x00	0x02	0xnn	0xnn

Antwort (Response)

Antwort (Response)								
Adresse	Function	Data					Check sum	
		Count bytes	Low-Word		High-Word			
			High-Byte	Low-Byte	High-Byte	Low-Byte		
0x01	0x03	0x04	0x6C	0xA6	0x00	0x01	0xnn	0xnn

Telegram: MODBUS-ASCII

Request

Start		Function		Data								Check sum		End	
				Start address				Count of registers							
				High-Byte		Low-Byte		High-Byte		Low-Byte					
'.'	'0'	'3'	'6'	'0'	'0'	'4'	'0'	'0'	'0'	'2'		'n'	'n'	CR	LF
0x3A	0x30	0x33	0x36	0x30	0x30	0x30	0x30	0x30	0x30	0x30	0x32	0xnn	0xnn	0x0D	0x0A

Response

Start			Function		Data								Check sum		End	
					Anzahl Bytes		Low-Word		High-Word							
					High-Byte		Low-Byte		High-Byte		Low-Byte					
'.'	'0'	'3'	'0'	'4'	'6'	'C'	'A'	'6'	'0'	'0'	'0'	'1'	'n'	'n'	CR	LF
0x3A	0x30	0x33	0x30	0x34	0x36	0x43	0x41	0x36	0x30	0x30	0x30	0x31	0xnn	0xnn	0x0D	0x0A

Write a 32-Bit Wertes

MODBUS Device address 1, Register index 0x6004, Count of registers 2, value 91696 (0x00016630)

Protokoll: MODBUS-RTU

Request

Address Function		Data										Check sum	
		Startadresse		Anzahl Register		Count Bytes	Low-Word		High-Word				
		High-Byte	Low-Byte	High-Byte	Low-Byte		High-Byte	Low-Byte	High-Byte	Low-Byte	Low-Byte	High-Byte	
0x01	0x10	0x60	0x04	0x00	0x02	0x04	0x66	0x30	0x00	0x01	0xnn	0xnn	

Response

Address	Function	Data								Check sum	
		Start address				Count of registers					
		High-Byte		Low-Byte		High-Byte		Low-Byte		Low-Byte	High-Byte
0x01	0x10	0x60		0x02		0x00		0x02		0xnn	0xnn

Note: Note that the Modicon compatible mode, with the 16-bit value of the register address (index), number of registers and register contents, always the high byte is first passported. In contrast, the low word is transmitted first with 32-bit values. This is handled for the FLOAT data type as.

Error codes

Modbus – The Modbus protocol provides for the transmission of error code in some cases.

Fehlercode	Beschreibung
0x01	Error code is not supported
0x02	Register address or index is not supported
0x03	Data error
0x04	General device error

If the checksum is faulty, the device sends no response to the request. This behavior is to generate a timeout on the opposite side.

Response

Address	Function	Error Number	Check sum	
			Low-Byte	High-Byte
0x01	0x83	0x04	0xnn	0xnn

An error is indicated by a set bit 7 in the function code in the response.

Device diagnostics

Diagnostic functions

Sub function	Data	Comment
0x0000	0x0000	Echo connection test
0x0001	0x0000	Start device initialization
	0x0001	Reset device
0x0002	0x0000	Request diagnostic register (see below)
0x000A	0x0000	Reset all diagnostic registers
0x000B	0x0000	Request count of communications
0x000C	0x0000	Request count of check sum errors
0x000D	0x0000	Request count of request errors
0x000E	0x0000	Request the total count of request messages
0x000F	0x0000	Request the count of broadcast request messages
0x0010	0x0000	like 0x000D
0x0012	0x0000	Request count of check sum overruns
0x0014	0x0000	Reset count of check sum overruns

Request / Antwort Response – Diagnostic functions

Address	Function	Data				Check sum	
		Sub function		Data			
		High-Byte	Low-Byte	High-Byte	Low-Byte	Low-Byte	High-Byte
0x01	0x08	0x00	0x00	0x00	0x00	0xnn	0xnn

Diagnostic register

Bit number	Comment
0	Time out during data request message
1	Measure range overrun
2 .. 15	Reserved

Note: The bits in the Diagnostic register remain set until they are by sending the subfunction 0x000A reset.